

INSTALLATION INSTRUCTIONS

61301604805 Rev. A

Castle[®]

7900

**FLOOR MOUNTED
CART WASHER**



INSTALLATION INSTRUCTIONS

Castle[®]

7900 FLOOR LOADING CART WASHER

Getinge/Castle, Inc.

1777 East Henrietta Road

Rochester, New York 14623-3133

Phone: (800) 950-9912 USA

Facsimile: (800) 950-2570

 **GETINGE** 

INSTALLATION INSTRUCTIONS 61301604805

Rev. A (12/27/01)

Related Publication:
Operator Manual 61301604804

DESCRIPTION OF SYMBOLS AND NOTES IN MANUAL

The following symbols with related notes appear in this manual.



“Warning” notes alert the user to the possibility of personal injury.



“Caution” notes alert the user to the possibility of damage to the equipment.



“Notes” alert the user to pertinent facts and conditions.



This manual contains proprietary information of Getinge/Castle, Inc. It shall not be reproduced in whole or in part without the written permission of Getinge/Castle, Inc.

Table of Contents

Section 1 Installation Requirements

GENERAL DESCRIPTION.....	1-1
MODEL IDENTIFICATION.....	1-2
UTILITIES AND SPECIFICATIONS.....	1-3
Electrical	1-3
Hot Water.....	1-3
Cold Water.....	1-3
Steam.....	1-3
Condensate	1-3
Drain	1-3
Exhaust	1-3
Weight	1-3
Overall Size	1-3
INSTALLATION ADVISORY	1-4
WASHER OPTIONS.....	1-4
Floor Mount vs. Pit Mount	1-4
Left Side vs. Right Side Controls.....	1-4
Barrier Flanges and Service Enclosure.....	1-4
Electrical Service	1-4
Printer	1-4
Seismic Anchoring	1-4
SHIPPING CONFIGURATION.....	1-5
TOOLS AND MATERIALS REQUIRED.....	1-6

Section 2 Installation

ASSEMBLE THE WASHER STRUCTURE	2-1
Install the Base/Sump Assembly	2-1
Assemble the Washer Panels	2-5
Door Assembly.....	2-10
Trim Panels (Non-Service Side)	2-12
INSTALL COMPONENTS ON TOP OF THE WASHER	2-13
Dryer and Condenser Assemblies.....	2-13
Power Floor Tilt Pulley System	2-17
Transformer and Emergency Stop Switch	
Junction Box	2-19
Rear Emergency Stop Switch	2-20
Plumbing Mounting Brackets.....	2-21

INSTALL COMPONENTS ON THE OUTSIDE	
OF THE WASHER.	2-22
Spray Manifold Drive Motor	2-23
Exhaust Elbow.	2-25
Washer Light Assembly.	2-26
Front Dryer Ducts	2-27
Control Box	2-29
Junction Box Assembly	2-30
Dispenser Float Switch Junction Box	2-31
Front Emergency Stop Switch.	2-32
Detergent and Rinse Aid Dispensers	2-33
Unload End Indicator Panel Box	2-34
Door Proximity Switches	2-35
Sump Drain Valve	2-36
Return Pump	2-37
Circulation Tank Assembly	2-38
Wash Pump.	2-39
Tank Drain Valve, Tank Overflow, and Tank	
Water Level Indicator	2-40
Booster Heater Assembly	2-41
Rinse Pump.	2-42
PLUMBING	2-43
Stainless Steel Plumbing.	2-43
Black Iron (Steam) Plumbing.	2-44
Hot Water (Copper) Plumbing	2-44
Cold Water (Copper) Plumbing	2-45
ELECTRICAL WIRING.	2-46
Objective	2-46
Installation	2-46
INSTALL COMPONENTS ON THE INSIDE OF	
THE WASHER.	2-49
Rear Dryer Ducts.	2-49
Drive Chain Tension Idlers and Idler Bearings	2-51
Chain Drive Assembly	2-52
Spray Manifold Supports and Manifold Assembly.	2-54
Manifold Cover and Spray Guard, Manifold Guard	
Tubes, Wash Cart Tubes	2-56
Emergency Stop Switch Cables	2-58
FINAL INSTALLATION TASKS	2-60
Final Door Assembly	2-61
Dispenser Tubing	2-62
Sanitary Barrier Flanges	2-64
Pit Covers (Option)	2-65
Service Area Enclosure (Option).	2-66
Base Shrouds (Floor Mounted Option)	2-67
Ramps (Floor Mounted Option).	2-68

Exhaust Connection 2-68

Plumbing System Connections 2-68

Electrical Supply Connection 2-69

Concluding Tasks 2-69

Section 1 Installation Requirements

General Description

The Castle 7900 Floor Loading Cart Washer is a fully automatic, floor loading, hydro-spray cart washer with dual side-by-side wash compartments that is used to clean and decontaminate case carts, stands, utensils, containers, tote boxes, and similar bulk items.

Processing cycles are set up using a programmable controller equipped with a touch screen interface (touch control panel). Four cycle definitions are possible. The operator needs only to select and start a cycle.


A standard cycle consists of the following sequential phases: wash, rinse, exhaust, and drying. The length of a cycle's phase can be adjusted at the touch control panel.

The washer can be installed in a shallow pit or at floor level. When installed in a pit, the floor of the washer's chamber is level with the room floor, which allows the direct loading and unloading of carts. When the washer is installed at floor level, the floor is higher than the room floor. Ramps are then provided as standard equipment to facilitate loading and unloading.

The washer is designed for pass-through operation. Items to be cleaned are placed in the washer's compartment through one of the load end doors. After cleaning, the items are removed from the opposite end of the washer through the unload end doors.

The washer is generally installed in a facility's decontamination room with the unload end doors opening out into a clean-preparation area. The unit is 110" (2794 mm) wide and 108" (2743 mm) high. The washer is currently available in only one compartment size: 98" (2489 mm).

Figure 1–1. 7900 Floor Loading Cart Washer

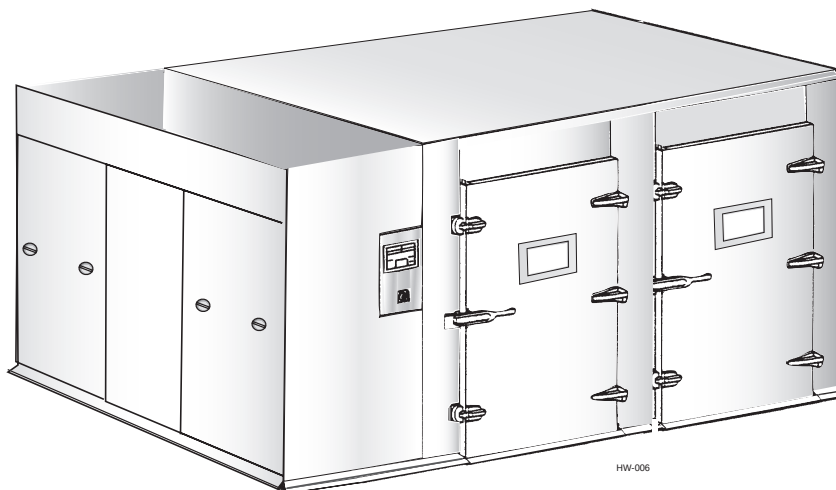

Model Identification

The rating plate for a 7900 washer is affixed to the inside of the control box door.


Record the model type and serial number (S/N) from the rating plate.

TYPE: _____

SERIAL NO: _____

Include the model type and serial number when communicating with Getinge/Castle.

Figure 1–2. Rating Plate Location

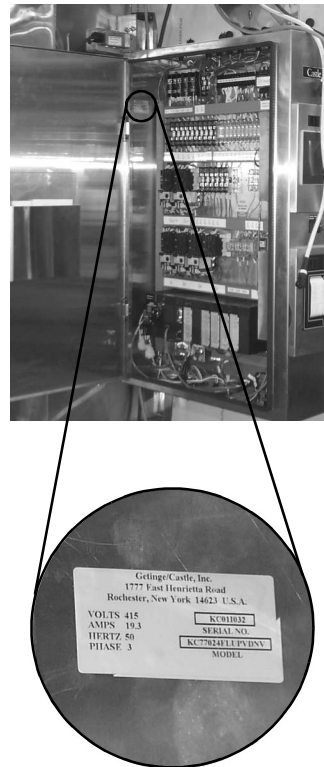

Utilities and Specifications

Electrical	208 V, 60 Hz, 3 phase, 100 A, 5-wire with neutral and ground 240 V, 60 Hz, 3 phase, 60 A, 4-wire with ground 380 V, 50 Hz, 3 phase, 60 A, 4-wire with ground 415 V, 50 Hz, 3 phase, 60 A, 4 wire with ground 480 V, 60 Hz, 3 phase, 30 A, 4-wire with ground 600 V, 60 Hz, 3 phase, 30 A, 4-wire with ground
Hot Water	1" IPS (25.4 mm) 40–60 PSI (276–414 kPa) 780 gal/hr (2953 l/hr) demand rate 12 gal/cycle (47 l/cycle) consumption 120° F min. (49° C)
Cold Water	3/4" IPS (19 mm) 40–60 PSI (276–414 kPa) 600 gal/hr (2271 l/hr) demand rate 10 gal/cycle (38 l/cycle) consumption
Steam	1-1/2" IPS 40–50 PSI (276–345 kPa) 1200 lb/hr demand rate 85 lb/cycle consumption
Condensate	3/4" IPS (19 mm)
Drain	3" IPS (76.1 mm) minimum 45 gal/cycle (170 l/cycle)
Exhaust	12" square flanged (304.8 mm) 800 ft ³ /hr (22.7 m ³ /hr) 1/4" static pressure
Weight	1800–2200 lb (811–991 kg) approximate
Overall Size	108" high x 110" wide x 106" long (2743 mm x 1321 mm x 1829 mm)

Installation Advisory

A 7900 washer is assembled at the factory, tested, then disassembled for shipment. Extensive on-site reassembly is required. The installation instructions in this manual are intended as the primary reference for accomplishing this reassembly. Every effort has been made to make this information as accurate as possible. No two washers are exactly alike, however.

Each washer is uniquely configured to meet the demands of its operational site. These demands most often necessitate variances in the location of a washer's exterior components. These variances, in turn, impact the configuration of related plumbing and electrical wiring assemblies.

For this reason, some instructions or illustrations carried here may not reflect the actual location or configuration of selected component assemblies for a specific site. Where applicable, installers should refer to specifications contained in the product information documents, such as Rough-In and Assembly drawings, that have been forwarded to local Getinge/Castle product support personnel.

Washer Options

There are a number of options that may be included with your washer. These options affect the procedures that apply to your specific installation.

Floor Mount vs. Pit Mount

A floor mounted washer will require the installation of ramps to provide access to the washer. The two options may have different plumbing specifications.

Left Side vs. Right Side Controls

The location of controls on your washer will also determine the location of the service area, as well as the barriers flanges and service enclosure that may be provided with your washer.

Barrier Flanges and Service Enclosure

Your installation may have barrier walls at the load or unload end of the washer, or both, as well as have a service enclosure. These structures will be designed specifically for your site.

Electrical Service

The electrical service at your facility determines the specific high voltage devices (motors, pumps, etc.), transformer, and control box provided with your washer.

Printer

If your washer has the printer option, the printer will already be mounted on the control box.

Seismic Anchoring

Washers with the seismic anchoring option have base/sump assemblies that are mounted differently.

Shipping Configuration

A disassembled 7900 washer is shipped on 4 to 8 pallets of various lengths. The maximum size of any one pallet may be as large as 10' x 5' (approximate). For stability during transit, selected pallets are often pegged (with nails) to the floor of the truck.

Moving the disassembled washer from the truck to the installation site requires the use of any available combination of the following:

- fork lift
- pallet jack
- dollies
- Johnson bars

A sufficient supply of commonly used fasteners (#10-32 and 1/4-20, for example) is bagged for shipment. Speciality hardware and fasteners (door latches and hinges, for example) are labeled and bagged separately for shipment.

Many disassembled items, such as plumbing and panel sections, are marked with handwritten numbers with black grease pen to identify their location, orientation, or connection points. Take care not to inadvertently smudge or erase these identifying marks.

Tools and Materials Required

The following tables list the specific tools and materials required at the installation site. Items marked with an asterisk * are supplied by Getinge/ Castle.

Table 1–1. Tools Required

Tool	Quantity
Common hand tools	Assorted
Bar clamp	2
C-clamp	2
Johnson bar	1
Pry/pinch bar	2
Caulking gun	1
1/4-20 tap, short	1
1/4-20 tap, long	1
10-32 tap, short	1
10-32 tap, long	1
#7 drill bit	2
#21 drill bit	2
Torpedo level	1
4' level	1
Scratch awl	2

Table 1–2. Materials Required

Material	Quantity
* Silicone adhesive	8 tubes
* Silicone primer	1 pt
* Thinner	1 pt
* Polish	1 container
* Stainless steel nuts, bolts, washers, lock washers	Assorted
* Wire nuts, tie wraps	Assorted
* 3" x 6" stainless steel shims:	
• 12 ga	12
• 14 ga	12
• 16 ga	12
• 18 ga	12

Material	Quantity
1" x 4" x 6" wood block	2
2" x 4" x 52" wood block	4

The following items are recommended for use if a floor mounted washer is to be assembled out-of-position, then moved to its intended operational site:

- * 4' x 8' x 1/8" Masonite, smooth 2 to 3
- Pipe, rigid 3/4" x 60" L 4

The Masonite protects the floor during assembly. The pipe is used to roll the washer into position after assembly.

Section 2 Installation

Assemble the Washer Structure

This section contains procedures for assembling the basic structure of the washer compartment. Refer to the following sections.

- “Install the Base/Sump Assembly” on page 2-1
- “Assemble the Washer Panels” on page 2-5
- “Door Assembly” on page 2-10
- “Trim Panels (Non-Service Side)” on page 2-12

Install the Base/Sump Assembly

General Instruction

The base/sump assembly is shipped in two halves that you must assemble on the site. If the load or unload ends of the base are not marked, check the configuration of the base's sump against the rough-in drawing to determine the correct orientation.



Some installation sites may have an existing wall in close proximity to the non-service side of the washer that could interfere with the assembly of the washer's side panels. If this situation exists, you will have to seat the base temporarily out-of-position until the side, top, and non-service side trim panels are assembled. You can then maneuver the unit to its operating position, where you can level and anchor it, if required.

Installation




Silicone primer (orange) is extremely flammable, harmful if swallowed or inhaled, and harmful to eyes or skin. Wear protective clothing, gloves, and eye wear when using this product. Keep it away from heat, sparks, and flames. Store upright in a cool place (less than 30°C (85°F)). Keep the container closed when not in use. Use only in a well-ventilated area. Avoid breathing vapors.



Silicone Primer stains/discolors clothing, stainless steel surfaces, flooring, etc. Avoid accidental spills. Avoid spreading this substance onto exterior surfaces of the washer.

1. Clean all mating surfaces where the two halves of the base meet with thinner, treat with silicone primer, and then apply a generous amount of silicone sealant.
2. Move the two halves of the washer base together and attach the halves together:
 - a. At each end, secure the front and rear halves together with 1/4-20 fasteners (four each 1/2" hex head bolts and lock washers) as shown in Figure 2-1.

Figure 2-1. Attaching Ends of Base Assembly

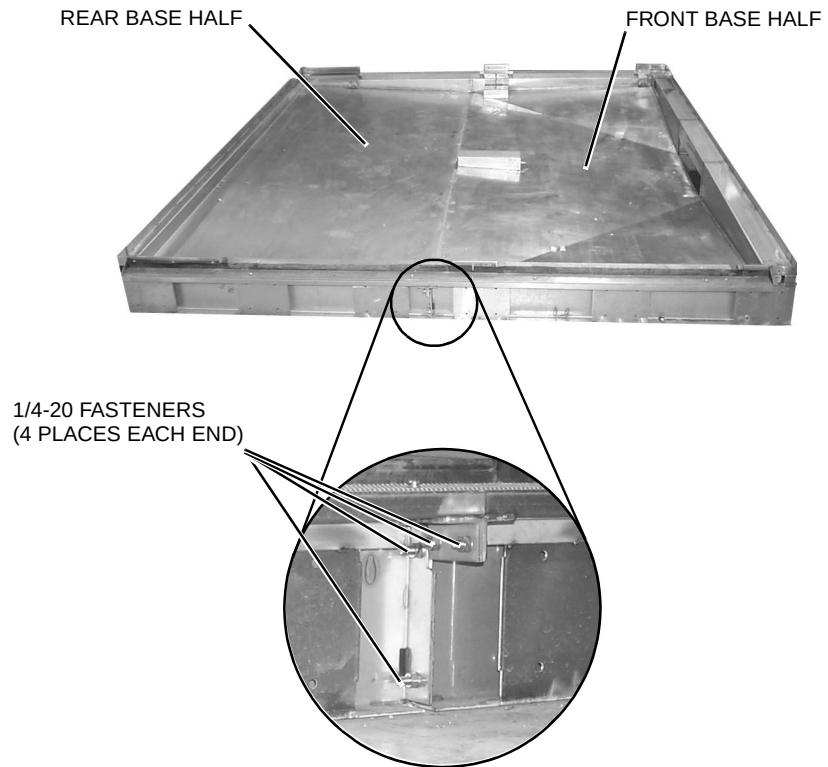


- b. Use a fork lift to raise one end of the assembly.



Make sure that the base/sump assembly is properly supported and secured before getting underneath the assembly.

- c. Underneath the sump, secure the halves together with 5/16-18 fasteners (1-1/2" hex head bolts and lock washers), two each at six places, as shown in Figure 2-2.

Figure 2–2. Attaching Base Assembly Underneath

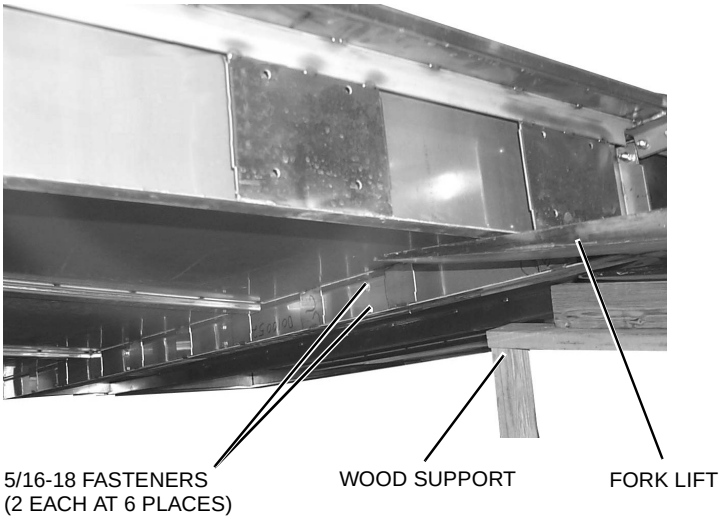

3. Move the base assembly into its final operating position.
4. Check the base for level.
Use the 4' level to check from all sides of the base and in all directions. Adjust the level if necessary using the stainless steel shims that are provided.



Failure to critically level the base will result in the misalignment of mounting holes and will make assembly of the washer panels difficult.

If seismic anchoring is required, a 3" flange (with anchor bolt holes) is welded to the bottom frame of the base for this purpose.

5. Drill holes for the anchors through the holes in the base flanges.


Table 2–1. Drilling Specifications

Drill Bit Size	1/2"
Embedment	1 1/4" to 3 1/2"
Torque	50 ft.-lb.

6. Secure the base to the floor using the 1/2 x 4-1/2" stud anchor bolts provided.

7. Lay the two track/frame assemblies into the base so that the floor lift weldments are toward the center of the washer, as shown in Figure 2–3. Base/Sump Components

Figure 2–3. Base/Sump Components

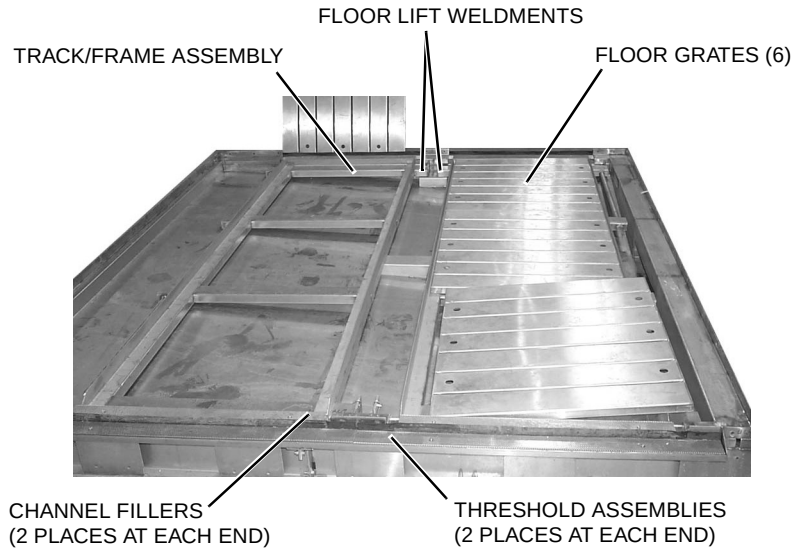

8. Lay the six floor grates in the tracks into the track/frame assemblies.
9. Lay the masonite sheets over the floor grates to protect from scratches while you complete the installation.
10. Position the four channel fillers (two on each end of the washer) in the floor and secure each with two #10-32 x 3/8" phillips head screws.
11. Install the four threshold assemblies in the floor.



There are two sizes: the longer threshold is installed on the rear (non-service side) of the washer, one on each end. The shorter threshold is installed on the front (service side) of each end.

- a. Position one threshold assembly in its appropriate location with the gasket facing toward the inside of the washer.
- b. Secure the assembly to the washer base with two #10-32 x 3/8" phillips head screws.

Assemble the Washer Panels

Objective

Assemble the door, side, and top panels. Install the required number of interior side panel seam cover strips and the center mounting bracket.

There are six side panels and three top panels. Each of the end (door) panels in turn consists of five panels: three vertical panels and two horizontal panels (one over each door) that connect to the vertical panels.

Door panels and side panels are marked to indicate their location. Top panels are not marked (check this). The unload end top panel has two rectangular cutouts for the condenser mountings, a cutout for one of the rear dryer ducts, and numerous threaded holes on its exterior surface for mounting the dryer assemblies. The load end top panel one cutout for the second rear dryer duct and has fewer mounting holes (for a transformer and plumbing mounting plates). the middle panel has mounting brackets for the floor tilt actuators. The width of a top panel is the width of the washer (92").

The side panels have 7/16" diameter holes that carry 3/8" thru bolts (five on each side of the washer) to hold the panels together. The top panels have holes to carry five thru bolts.

There is no established order to follow for panel assembly. You can start from the load or the unload end. You can assemble all the vertical panels first, followed by the top panels; or you can add individual top panels as you erect the vertical panels. The method illustrated below starts from the load end and progressively adds top panels as the vertical panels are erected.

You must clean all mating surfaces with thinner, then treat with silicone primer, and then apply a generous amount of silicone sealant.

Installation

Refer to Figure 2–4. Assembling the Washer Panels for help to identifying washer panels.



You must clean all mating surfaces with thinner, then treat with silicone primer, and then apply a generous amount of silicone sealant.




Silicone primer (orange) is extremely flammable, harmful if swallowed or inhaled, and harmful to eyes or skin. Wear protective clothing, gloves, and eye wear when using this product. Keep it away from heat, sparks, and flames. Store upright in a cool place (less than 30°C (85°F)). Keep the container closed when not in use. Use only in a well-ventilated area. Avoid breathing vapors.



Silicone Primer stains/discolors clothing, stainless steel surfaces, flooring, etc. Avoid accidental spills. Avoid spreading this substance onto exterior surfaces of the washer.

Figure 2-4. Assembling the Washer Panels

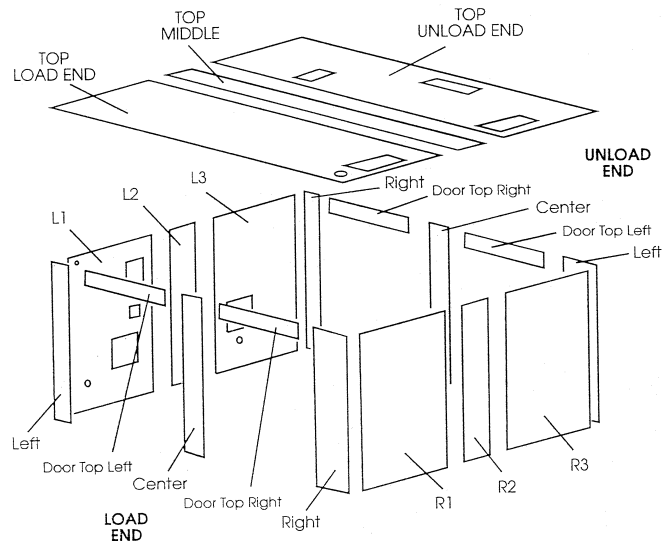

1. Clean all mating surfaces with thinner, treat with silicone primer, and then apply a generous bead of silicone sealant wherever a wall panel is attached to the base or to another panel.
2. Attach the load end door panels to the base.

There are three vertical panels. The service side panel is narrow and has three mounting holes at the top to attach to the horizontal panels. The middle panel is narrow and has six mounting holes at the top. The non-service-side panel is wide.

 - a. Position a vertical panel.
 - b. Secure the bottom legs of the panel to the base frame with 1/4-20 fasteners (1/2" hex head bolts, flat washers, and lock washers).
 - c. Repeat steps a and b for the other vertical panels.
 - d. Secure each horizontal panel between two vertical panels with 1/4-20 fasteners (six each 3/4" hex head bolts and lock washers).

3. Attach the load end side panels to the base and to the load end door.
 - a. Position one of the load end side panels.
 - b. Partially insert five 3/8" diameter thru rods through the 7/16" diameter holes to stabilize and align the side panel with the door panel.
 - c. Use pipe clamps to draw the panels tight as shown in Figure 2–5.

Figure 2–5. Installing Washer Panels



- d. Secure the bottoms of the side panel to the base frame with 1/4-20 fasteners (1/2" hex head bolts and lock washers).
 - e. Repeat steps a through d for the other load end side panel.
 4. Attach the middle side panels to the base and to the load end panels.
 - a. Remove the pipe clamps.
 - b. Position one of the middle side panels.
 - c. Extend the five thru bolts to stabilize and align the panels with the load end side panel.
 - d. Attach the pipe clamps to draw these panels tight.
 - e. Secure the bottoms of the middle Side panel to the base frame with 1/4-20 fasteners (1/2" hex head bolts and lock washers).

- f. Repeat steps a through d for the other middle side panel.
 - g. To ensure side panel alignment, attach C-clamps and 2x4" wooden blocks across the top edge of the adjoining panels at the vertical seam.
 5. Attach the load end top panel to the door panel and to the load end side panels.
 - a. Position the load end top panel.
 - b. Secure the top panel to the door and load end side panels with 1/4-20 fasteners (1-3/4" hex head bolts, flat washers, and lock washers).
 - c. Partially insert the five remaining 3/8" diameter thru bolts through the 7/16" diameter holes in the panel.
 6. Attach the unload end side panels to the base and to the middle (or load end) side panels.
 - a. Remove the pipe clamps.
 - b. Position one of the unload end side panels.
 - c. Extend the five thru bolts to stabilize and align this panels with the previously erected panels.
 - d. Attach the pipe clamps to draw these panels tight.
 - e. Secure the bottom of the unload end side panel to the base frame with 1/4-20 fasteners (1/2" hex head bolts and lock washers).
 - f. Repeat steps a through d for the other unload end side panel.
 - g. Move the C-clamp and 2" x 4" wooden block assemblies to the vertical seams created by the installation of these panels.
 7. Attach the middle top panel to the load end top panel and to the middle side panels.
 - a. Position the middle top panel.
 - b. Extend the two thru bolts.
 - c. Secure this panel to the middle side panels with 1/4-20 fasteners (1-3/4" hex head bolts, flat washers, and lock washers).

8. Attach the unload end door panels to the base and to the unload end side panels.
 - a. Remove the pipe clamps.
 - b. Position a vertical panel.
 - c. Secure the bottom legs of the panel to the base frame with 1/4-20 fasteners (1/2" hex head bolts, flat washers, and lock washers).
 - d. Repeat steps a and b for the other vertical panels.
 - e. Secure each horizontal panel between two vertical panels with 1/4-20 fasteners (six each 3/4" hex head bolts and lock washers).
 - f. Extend the ten side thru bolts.
 - g. Attach the pipe clamps to draw the door panels tight.
 - h. Secure the thru bolts at both ends of the washer with 3/8" acorn nuts and flat washers.
9. Attach the unload end top panel to the unload end side panels and to the unload end door panel.
 - a. Remove the C-clamp assemblies.
 - b. Position the unload end top panel.
 - c. Extend the five thru bolts.
 - d. Secure this panel to the unload end door panels and side panels with 1/4-20 fasteners (1-3/4" hex head bolts, flat washers, and lock washers).
 - e. Secure the thru bolts at both ends of the washer with 3/8" acorn nuts and flat washers.
10. Inside the washer, attach the four panel seam cover strips over the vertical seams between adjoining side panels using #10-32 screws and lock washers.
11. Attach the center mounting plate inside the washer, from the load end to the unload end.
 - a. Align the holes in the mounting plate with the threaded holes along the center of the washer.
 - b. Secure the mounting plate to the washer with six 1/4-20 fasteners (3/4" hex head cap screws, lock washers, and flat washers). The mounting plate is attached to the top panels in four places and once in each center end panel.

Door Assembly


Objective

Attach hardware to the doors and related door panels. Install two doors each on both the load and unload ends of the washer. Plumb and square all four doors.

Installation

Refer to Figure 2–52. Door Assembly.

Figure 2–6. Door Assembly

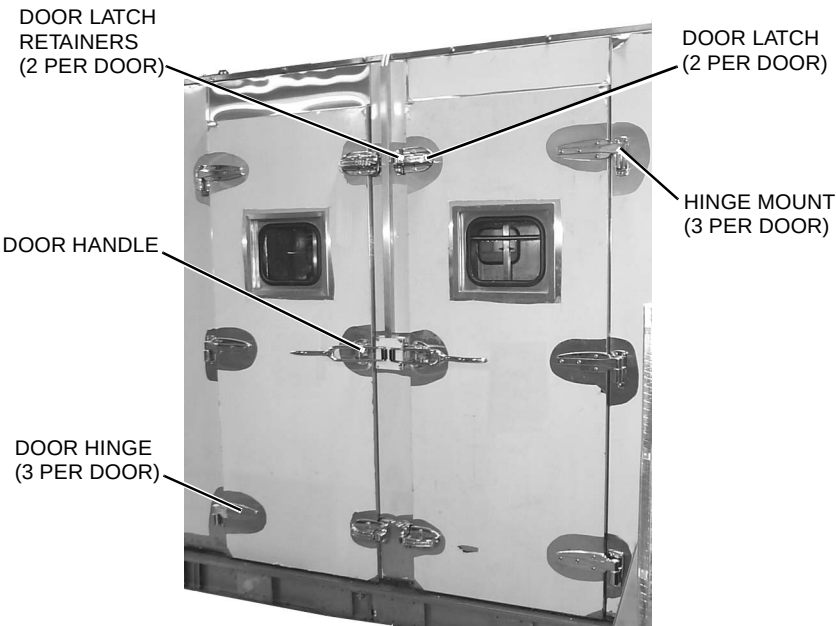

A washer door is heavy and awkward to handle. Take care to avoid crushing or strain injuries.



The washer may be shipped with all of the hardware (hinges, latches, striker plates, etc.) already mounted on both the doors and the door panels. If so, start with step 3 below.

1. Attach the following items to each door panel:
 - a. Attach three hinge mounts using nine 1/4-20 fasteners (1" phillips head screws).
 - b. Attach two door latch retainers, two door latch shims, and two spacers using four 5/16-18 fasteners (2" hex head cap screws and lock washers).
2. Attach the following items to each door:
 - a. Attach two door latches using four 5/16-18 fasteners (1" hex head cap screws and lock washers).
 - b. Attach three hinges using twelve 1/4-20 fasteners (1" phillips head screws).
 - c. Attach the door handle using four 5/16-18 fasteners (1" hex head cap screws and lock washers).
3. Mount the door on the washer.
 - a. Raise and maneuver the door until its hinge posts are in vertical alignment over the three hinge mounts attached to the door panel.
 - b. When aligned, lower the door and properly seat all three posts in their respective mounts.
4. Repeat steps 1 through 3 for the other door assemblies.
5. Check all door openings for plumb and square. If necessary, use the shims that are provided.



After the plumb and square of all doors is checked and corrected, it may be easier to lift the doors off their hinges and set them aside until the end of the installation of the washer.

Trim Panels (Non-Service Side)

Objective

The narrow width of the trim panels and the presence of a restrictive wall may require that you assemble the washer out-of-position up to this point. After you attach the panels, you can move the washer to its exact operational position, where you can level the washer, and seismically anchor it if required.

Installation

1. Attach any required trim panels to the non-service side of the washer using #10-32 fasteners (3/8" pan head screws and lock washers).
2. If necessary, move the washer to its final position. Level and, if required, anchor the washer.

Install Components on Top of the Washer

There are a number of components that are installed on the top panels of the washer. Although there is no specific order in which the components should be installed, the list below presents the items in a recommended order. Refer to the following sections.

- “Dryer and Condenser Assemblies” on page 2-13
- “Power Floor Tilt Pulley System” on page 2-17
- “Transformer and Emergency Stop Switch Junction Box” on page 2-19
- “Rear Emergency Stop Switch” on page 2-20
- “Plumbing Mounting Brackets” on page 2-21



Before installing any components on top of the washer, you must ensure that the door openings are plumb and square. Failure to do so can result in doors that do not open and close correctly, as well as water leaks.

Dryer and Condenser Assemblies

Objective


Assemble the two dryer/blower assemblies, the two condenser duct assemblies, and the rear top dryer duct.

Generally, the dryer assemblies are mounted on top of the washer. When sufficient space is not available, these assemblies are redesigned for installation in the unit's service area. These configurations vary and are not accurately represented in these Installation Instructions. To install the dryer assemblies in the washer's service area, refer to the Rough-In Drawing for guidance.

Installation

1. Install the front dryer/blower assembly and the condenser on the washer. Refer to Figure 2–7. Front Dryer and Condenser Assembly Locations.

Figure 2–7. Front Dryer and Condenser Assembly Locations

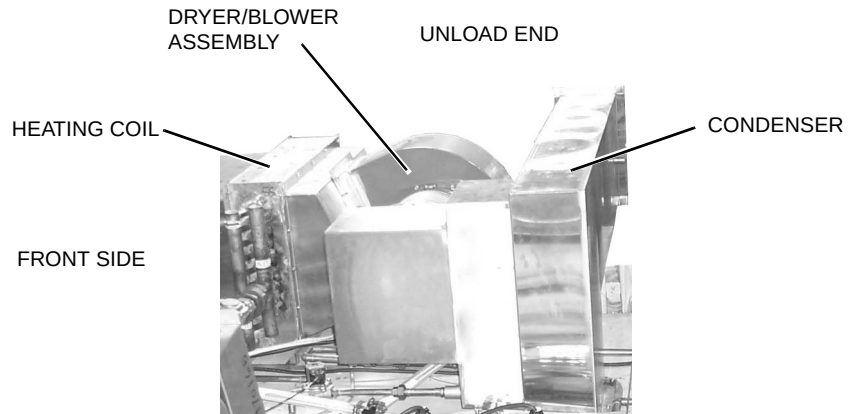

- a. Position the front dryer/blower assembly on top of the unload end top panel.




The front (service side) dryer is normally located at the unload end of the washer and oriented so that the heating coil faces the side of the washer.

- b. Align the holes in the assembly's mounting frame with the matching #10-32 threaded holes in the panel.
- c. Apply sealant to the screw threads and secure the frame to the panel with eight #10-32 fasteners (3/4" slotted pan head screws, lock washers, and flat washers).
- d. Apply silicone sealant to the edge of the front condenser cutout in the top panel.
- e. Position the front condenser duct assembly on the unload end top panel.
- f. Align the holes in the assembly's flange to the matching #10-32 threaded holes around the outside of the opening in the panel.
- g. Secure the condenser's flange to the top panel with eight #10-32 (3/4" phillips head screws, lock washers, and flat washers).
- h. Attach the 9" vent hose to the condenser and to the dryer with hose clamps.

2. Install the rear dryer/blower assembly, condenser, and top dryer duct on the washer. Refer to Figure 2–8. Rear Dryer and Condenser Assembly Locations.

Figure 2–8. Rear Dryer and Condenser Assembly Locations

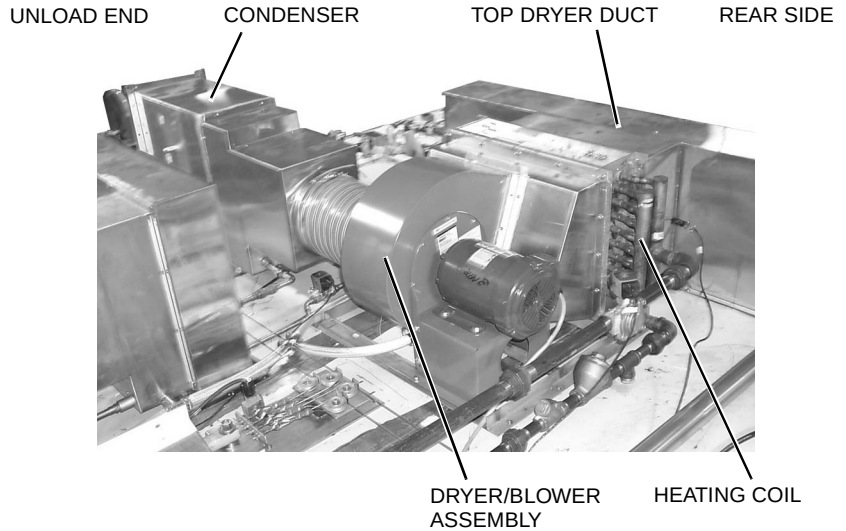

- a. Position the rear dryer/blower assembly on top of the unload end top panel.


NOTE ▶

The rear (non-service side) dryer is normally located near the middle of the washer and oriented so that the heating coil faces the side of the washer.

- b. Align the holes in the assembly's mounting frame with the matching #10-32 threaded holes in the panel.
- c. Apply sealant to the screw threads and secure the frame to the panel with #10-32 fasteners (eight each 3/4" slotted pan head screws, lock washers, and flat washers).
- d. Apply silicone sealant to the edge of the front condenser cutout in the top panel.
- e. Position the front condenser duct assembly on the unload end top panel.
- f. Align the holes in the assembly's flange to the matching #10-32 threaded holes around the outside of the opening in the panel.
- g. Secure the condenser's flange to the top panel with #10-32 (eight each 3/4" phillips head screws, lock washers, and flat washers).

- h. Attach the 9" vent hose to the condenser and to the dryer with hose clamps.
 - i. Apply silicone sealant to the mating flange surrounding the rear dryer's heating coil and to the mating surfaces surrounding the two 18" x 7-1/2" rectangular cutouts in the top panels.
 - j. Position the rear dryer duct on top of the washer.
 - k. Secure the duct to the heating coil flange with #10-32 fasteners (fifteen each 1/2" phillips head screws, lock washers, and flat washers).
 - l. Secure the duct to the top panel with nine #10-32 fasteners per cutout (nine each 1/2" phillips head screws, lock washers, and flat washers).
 - m. Inside the washer compartment, apply additional sealant to the interior joints formed between the duct and the panel.
3. Connect the drain output from each of the condensers and the elbow fitting located beneath each blower to drain using 3/4" diameter flexible tubing, hose clamps, and tee connectors. Refer to Figure 2–9.

Figure 2–9. Condenser and Dryer Drain Tubing

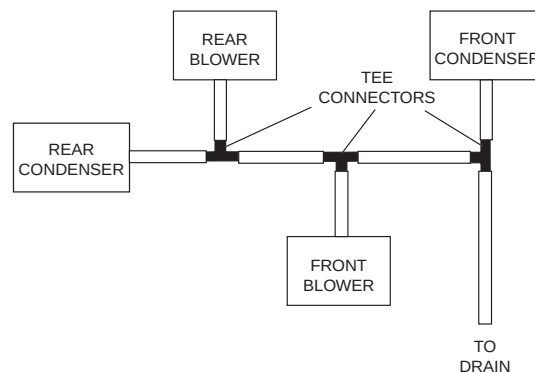


Power Floor Tilt Pulley System

Objective

Install the power floor tilt pulley system. The top panels have 1/4-20 threaded holes to mount the system's five components. The actuator assembly is installed on the top middle panel, with the actuator mounted on the front (service) side and the pulleys in the middle. The pulley cables run the length of the washer from the middle to ends of the washer above the load and unload end doors.


Installation

Figure 2–10. Power Floor Tilt Actuator Assembly

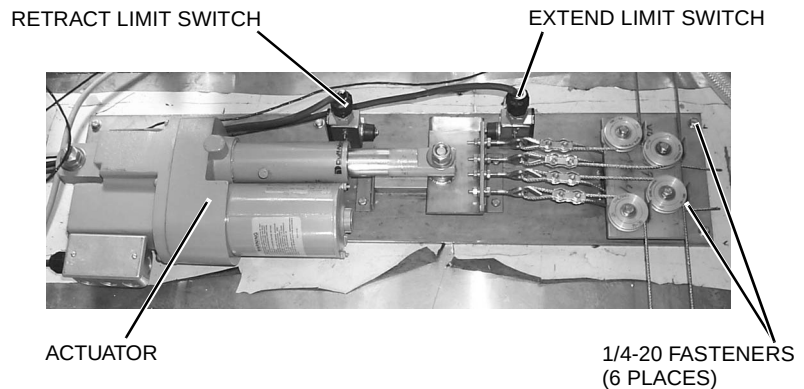

1. Install the following components on the service side of the washer's top panels:
 - a. Align the actuator assembly with the holes in the top panel and secure with six 1/4-20 fasteners. Refer to Figure 2–10. Power Floor Tilt Actuator Assembly.
 - b. Secure the two load end pulley mounts to the middle of the load end top panel with 1/4-20 fasteners (two each 1/2" hex head screws, lock washers, and flat washers). Refer to Figure 2–11. Power Floor Tilt Pulley Mounts.
 - c. Secure the two unload end pulley mounts to the middle of the unload end top panel with 1/4-20 fasteners (two each 1/2" hex head screws, lock washers, and flat washers).

Figure 2–11. Power Floor Tilt Pulley Mounts

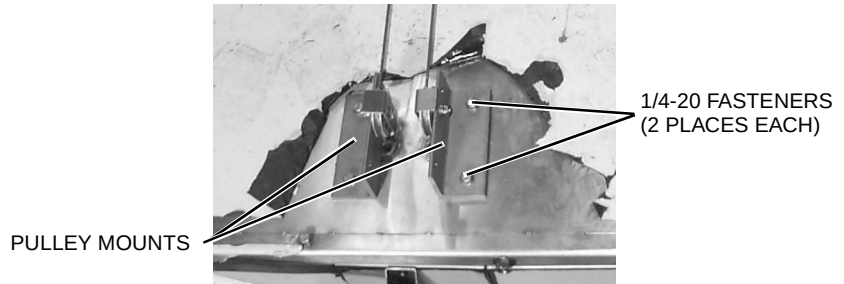


2. Route the four pulley cables from the actuator, through the pulley mounts, and then down through the four gasketed cable holes in the paneling to the compartment floor.



You may have to enlarge a gasket hole with a drill if the cable does not fit through the hole.

3. Slide the black cable sleeves over the section of cable inside the washer.
4. Using a cable fastener, secure each of the four pulley cables to its corresponding floor lift weldment. Refer to Figure 2–12. Attaching Cables to Floor Lift Weldments.

Figure 2–12. Attaching Cables to Floor Lift Weldments

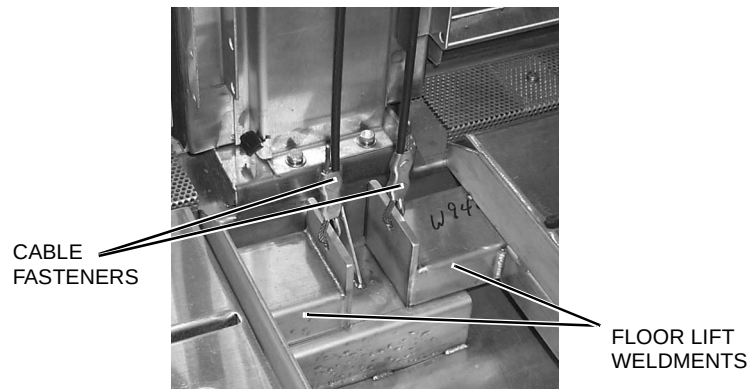


5. Using #6-32 fasteners, attach the two limit switches to the actuator's mounting plate.

Transformer and Emergency Stop Switch Junction Box

Objective

Install the transformer and the junction box for the emergency stop switches to the top of the washer. The specific transformer used with your washer depends on the house-supplied voltage.

Figure 2–13. Transformer and Emergency Stop Junction Box Locations

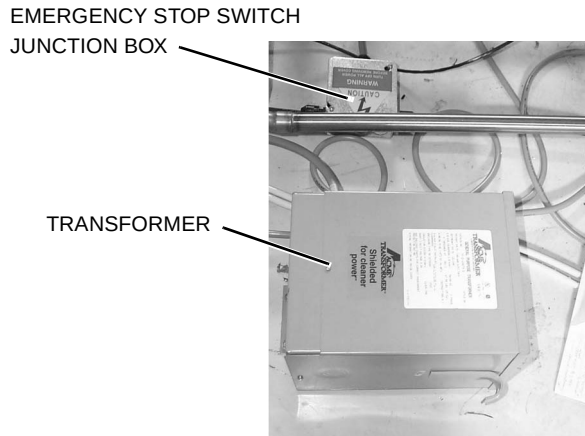

Installation

Refer to Figure 2–13. Transformer and Emergency Stop Junction Box Locations.

1. Install the transformer.

Transformers are sized differently but are generally located on the service side of the load end top panel and positioned so that the output power cable is facing the service side for the washer.

1. Align the transformer's mounting holes to the threaded holes in the panel.

- Secure the transformer to the panel with four 1/4-20 fasteners.

2. Install the emergency stop switch junction box.

- Remove the face plate of the box.
- Align the mounting holes in the back of the box with the two #10-32 threaded holes on the top panel near the transformer you installed above.
- Use #10-32 fasteners to secure the box to the washer.
- Install the face plate.

Rear Emergency Stop Switch


Objective

Attach the rear emergency stop switch to the top of the washer. The switch is mounted on the rear (non-service side) of the washer at the load end.

Installation

Refer to Figure 2–14. Rear Emergency Stop Switch.

Figure 2–14. Rear Emergency Stop Switch

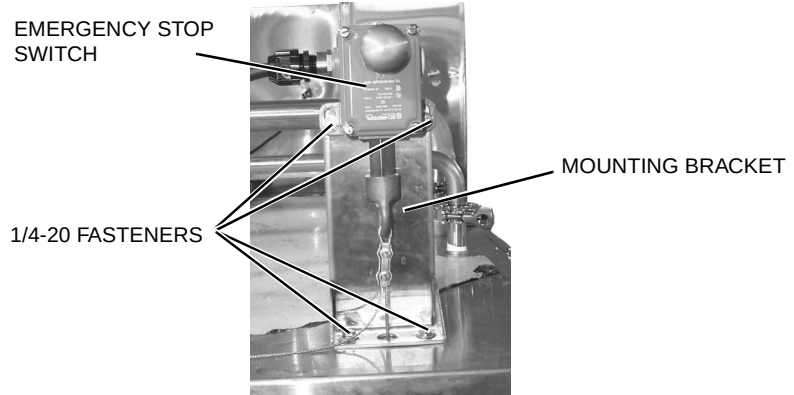

1. Mount the emergency stop switch to the mounting bracket using 1/4-20 fasteners (two each hex head cap screws, lock washers, and flat washers).
2. Align the two holes in the mounting bracket with the holes on the load end top panel.
3. Secure the bracket and switch to the washer with 1/4-20 fasteners (two each hex head cap screws, lock washers, and flat washers).

Plumbing Mounting Brackets


Objective

Attach four mounting brackets to the top of the washer to support the piping for the rear side of the washer.

Installation

Refer to Figure 2–15. Plumbing Mounting Brackets for the location and relative size of each bracket.

Figure 2–15. Plumbing Mounting Brackets

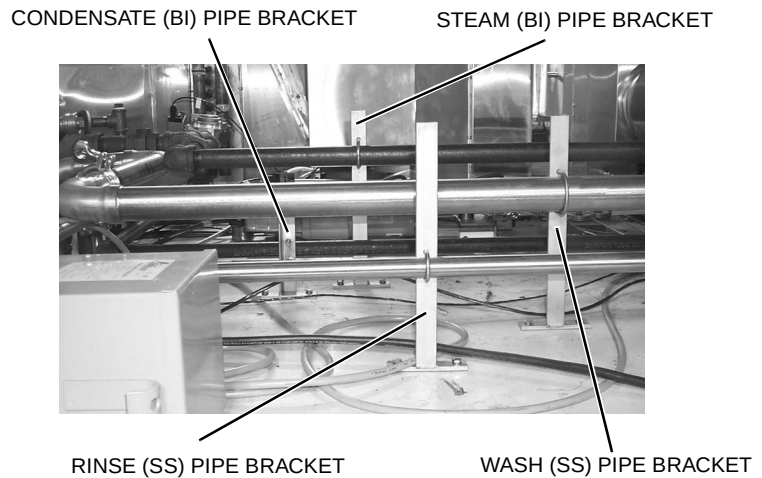

1. Determine the correct location for each bracket. The brackets are marked with index markers that match numbers on the top panel.
2. Align the holes in one mounting bracket with the two holes in the top of the washer.
3. Secure the bracket with 1/4-20 fasteners (two each hex head cap screws, lock washers, and flat washers).
4. Repeat steps 2 and 3 for the other brackets.

Install Components on the Outside of the Washer

This section provides instructions for installing equipment on the outside of the washer. The procedures are presented in a recommended order (some larger components are easier to install if they are done earlier, for example). Refer to the following sections.

- “Spray Manifold Drive Motor” on page 2-23
- “Exhaust Elbow” on page 2-25
- “Washer Light Assembly” on page 2-26
- “Front Dryer Ducts” on page 2-27
- “Control Box” on page 2-29
- “Junction Box Assembly” on page 2-30
- “Dispenser Float Switch Junction Box” on page 2-31
- “Front Emergency Stop Switch” on page 2-32
- “Detergent and Rinse Aid Dispensers” on page 2-33
- “Unload End Indicator Panel Box” on page 2-34
- “Door Proximity Switches” on page 2-35
- “Sump Drain Valve” on page 2-36
- “Return Pump” on page 2-37
- “Circulation Tank Assembly” on page 2-38
- “Wash Pump” on page 2-39
- “Tank Drain Valve, Tank Overflow, and Tank Water Level Indicator” on page 2-40
- “Booster Heater Assembly” on page 2-41
- “Rinse Pump” on page 2-42


Spray Manifold Drive Motor

Objective

Assemble the spray manifold drive's flange bearing and the spray manifold drive motor.

Installation

Figure 2–16. Manifold Drive Flange Bearing

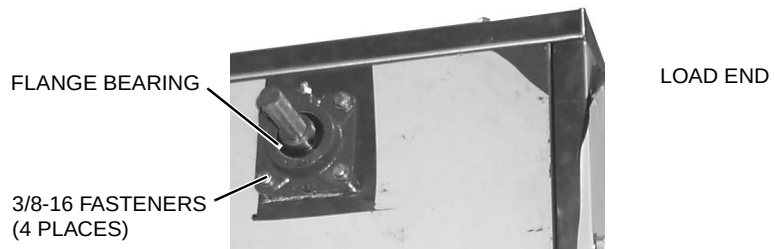


1. Use 3/8"-16 fasteners (four each 1" hex head cap screws and lock washers) to loosely secure the flange bearing in position at the upper corner of the load end side panel, as shown in Figure 2–16.

NOTE ►

You will tighten the bearing after you assemble the drive shaft and couple it to the drive motor (refer to "Chain Drive Assembly" on page 2-52).

Figure 2–17. Spray Manifold Drive Motor

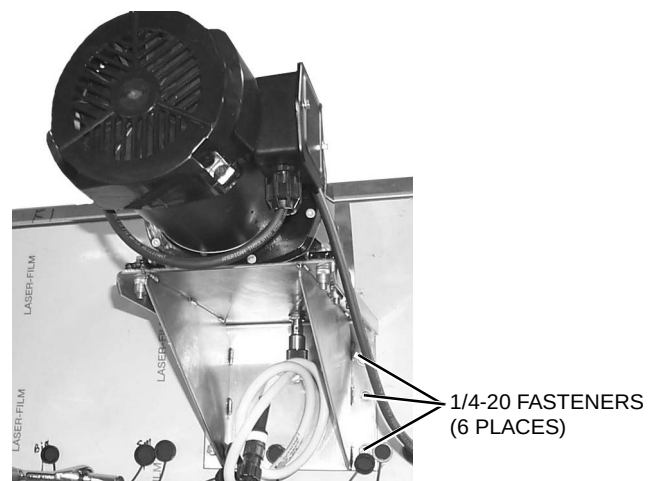

Installation

2. As shown in Figure 2–17, position the spray drive manifold motor and bracket over the six threaded holes located in the panel directly below the flange bearing and use 1/4-20 fasteners (six each 3/4" hex head cap screws, lock washers, and flat washers) to secure the mounting fixture to the panel.
3. Slip the proximity switch collar over the drive shaft of the motor and secure by tightening the hex head cap screw.

Exhaust Elbow


Objective

Install the exhaust elbow on the side of the washer.

Installation

Refer to Figure 2–18. Exhaust Elbow.

Figure 2–18. Exhaust Elbow

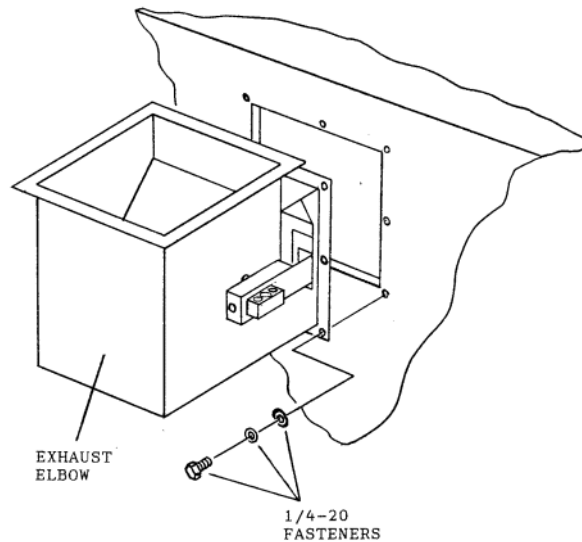

1. Apply silicone sealant to the mating surface surrounding the 12" cutout next to the spray manifold drive motor.
2. Position the exhaust elbow against the cutout and secure with 1/4-20 fasteners (eight each hex head cap screws, lock washers, and flat washers).
3. Inside the washer compartment, apply additional sealant to the interior joint formed between the elbow and the side panel.

Washer Light Assembly


Objective

Install the interior light in the cutout located on the front (service side) wall.

Installation


1. Remove and retain the nine fasteners securing the interior cover of the light assembly.
2. Align the holes in the light assembly with the holes surrounding the cutout in the front panel.
3. Secure the light assembly to the front panel with four #10-32 fasteners (phillips head screws and flat washers) as shown in Figure 2–19.

Figure 2–19. Washer Light Assembly (Outside)

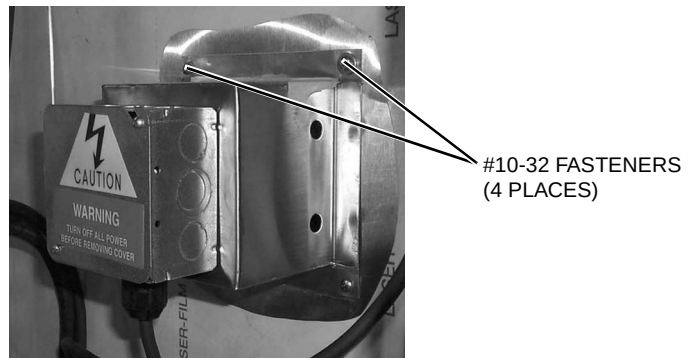

4. On the inside of the washer, apply silicone sealant around the edge of the light assembly.
5. Place the gasket and cover over the light assembly and secure with eight #10-32 fasteners (phillips head screws, lock washers, and flat washers) as shown in Figure 2–20.

Figure 2–20. Washer Light Assembly (Inside)

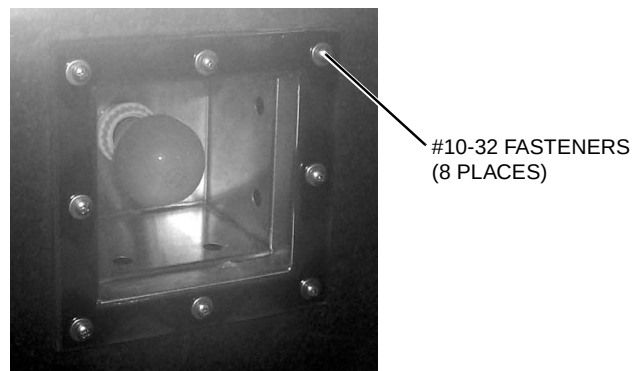

Front Dryer Ducts

Objective

Mount the dryer ducts.

The front (service side) dryer duct connects the dryer's heating coil to two 13-1/4" x 18" cutouts in the side panels. Generally, the duct work consist of a vertical and a horizontal section. However, other configurations are possible if the dryer is mounted against the side of the unit. The rear (non-service side) dryer duct connects to two cutouts on the top panel of the washer, which in turn, connect to the two rear dryer ducts on the inside of the washer.

Installation

1. Install the lower (horizontal) section of the front (service side) dryer duct. Refer to Figure 2–21. Horizontal Section of Front Dryer Duct.

Figure 2–21. Horizontal Section of Front Dryer Duct




HORIZONTAL SECTION OF
FRONT DRYER DUCT

- a. Apply silicone sealant to the mating surfaces surrounding the 18" x 13-1/4" rectangular cutouts in the front (service side) side panels.
- b. Secure the horizontal section of the duct to the cutouts with ten #10-32 fasteners (1/2" phillips head screw, lock washer, and flat washer) per cutout.
- c. Inside the washer compartment, apply additional sealant to the interior joints formed between the duct and the panel.

2. Install the upper (vertical) section of the front dryer duct. Refer to Figure 2–21. Horizontal Section of Front Dryer Duct.

Figure 2–22. Vertical Section of the Front Dryer Duct

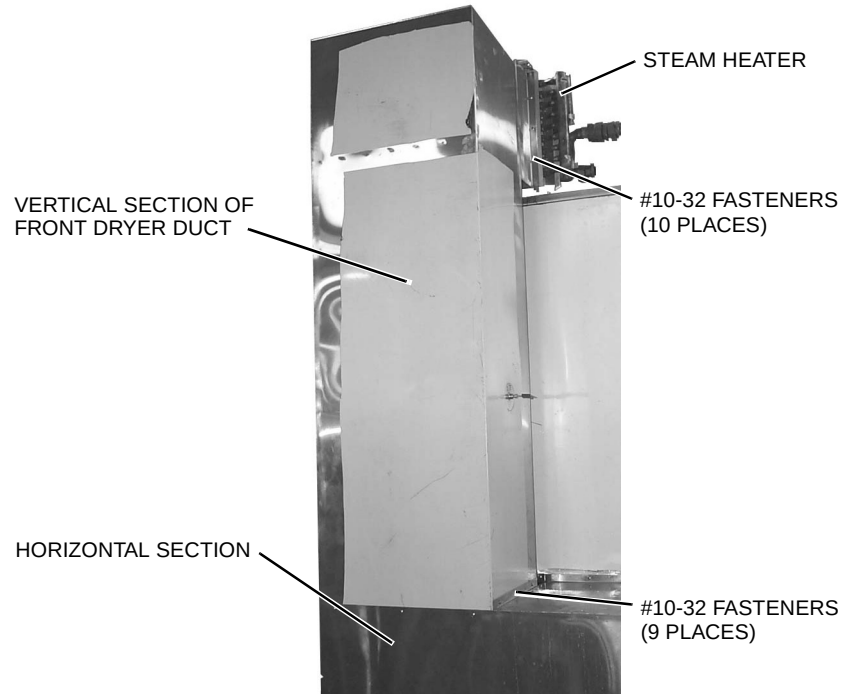

- a. Apply silicone sealant to the mating flange surrounding the dryer's heating coil and to the mating surface between the vertical and horizontal ducts.
- b. Position the vertical duct on the horizontal duct.
- c. Secure the upper end to the heating coil flange with #10-32 fasteners (fifteen each 1/2" phillips head screws, lock washers, and flat washers).
- d. Secure the lower end to the horizontal duct with #10-32 fasteners (nine 1/2" phillips head screws, lock washers, and flat washers).



One or more standoffs may have been welded to the dockworker to support a plumbing assembly. Clamps are provided to secure plumbing to standoffs.

Control Box


Objective

Attach the control box to the load end side panel.

Installation

Refer to Figure 2–23. Control Box.

Figure 2–23. Control Box

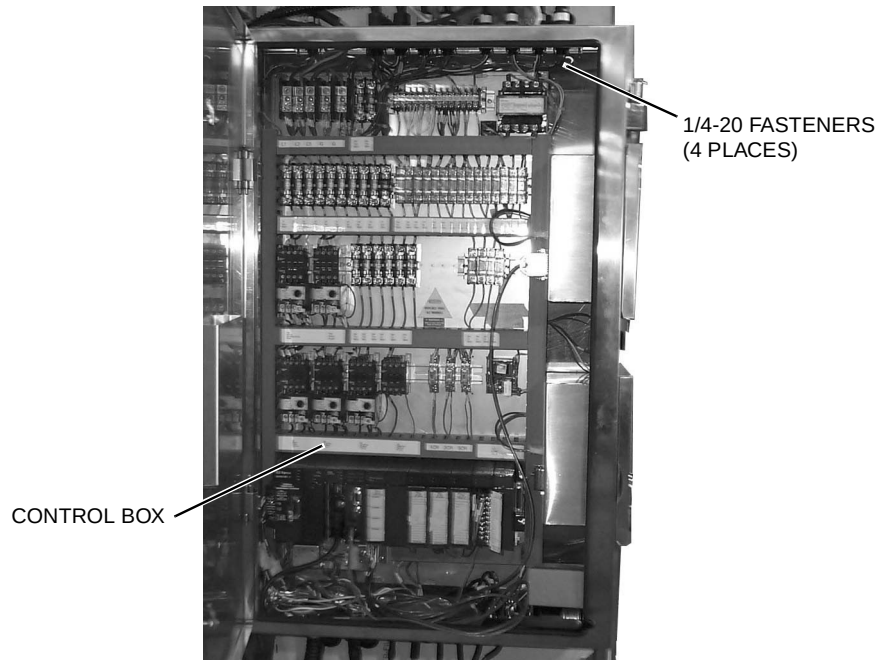

1. Remove the pins from the door hinges and set the door aside.
2. Position the control box on the load end side panel and align the mounting tabs on the top and bottom of the box with the four threaded holes in the panel.
3. Use 1/4-20 fasteners (4 each 3/4" hex head cap screws, flat washers, and lock washers) to secure the control box to the panel.
4. Install the door on the control box.

Installation

Junction Box Assembly


Objective

Install the junction box assembly to the side of the washer.

Installation

Refer to Figure 2–24. Junction Box Assembly.

Figure 2–24. Junction Box Assembly

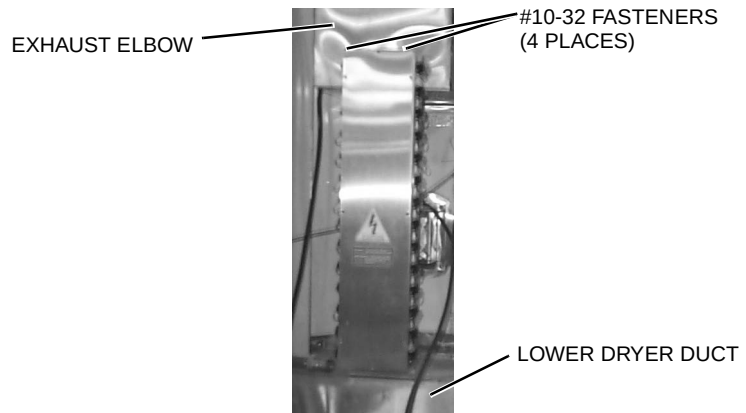

1. Position the junction box and align its mounting holes with those on the front panel of the exhaust elbow and on the top of the lower dryer duct.
2. Secure the junction box to the exhaust elbow and to the dryer duct using #10-32 fasteners (four each 3/8" pan head screws and lock washers).

Dispenser Float Switch Junction Box


Objective

Install the junction box for the detergent and rinse aid dispenser float switches on the front (service side) panel at the load end of the washer.

Installation

Refer to Figure 2–25. Dispenser Float Switch Junction Box.

Figure 2–25. Dispenser Float Switch Junction Box

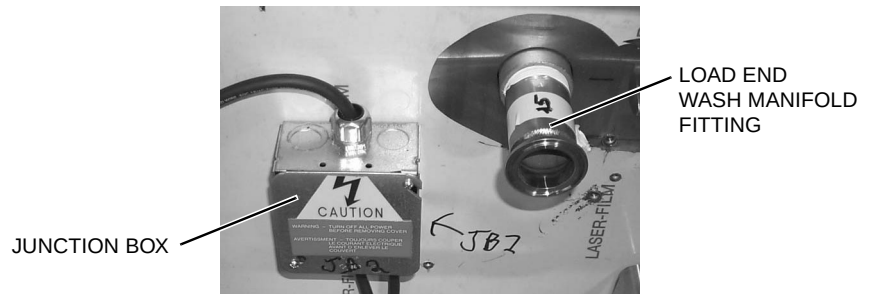

1. Remove the face plate of the box.
2. Align the mounting holes in the back of the box with the two #10-32 threaded holes on the front side panel at the load end of the washer.
3. Use #10-32 fasteners to secure the box to the panel.
4. Install the face plate.

Front Emergency Stop Switch


Objective

Attach the front emergency stop switch to the side panel of the washer. The switch is mounted at the load end of the washer, over the detergent dispenser.

Installation

Refer to Figure 2–26. Front Emergency Stop Switch.

Figure 2–26. Front Emergency Stop Switch

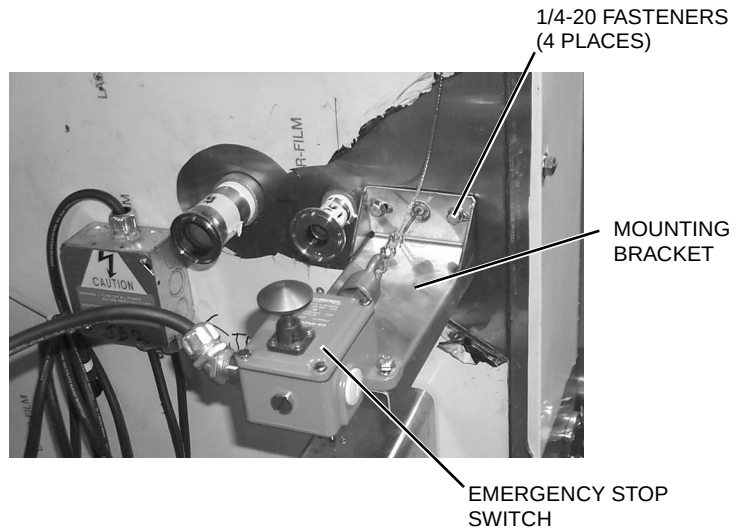

1. Mount the emergency stop switch to the mounting bracket using two 1/4-20 fasteners (hex head cap screws, lock washers, and flat washers).
2. Align the two holes in the mounting bracket with the holes on the load end side panel.
3. Secure the bracket and switch to the washer with two 1/4-20 fasteners (hex head cap screws, lock washers, and flat washers).

Detergent and Rinse Aid Dispensers

Objective

Mount the detergent dispenser on the load end side panel (below the control box) and the rinse aid dispenser to the top of the lower dryer duct.

Installation


Refer to Figure 2–27. Detergent Dispenser.

Figure 2–27. Detergent Dispenser



1. Remove the cover of the detergent dispenser.
2. Align the mounting holes in the back plate with the threaded holes in the panel.
3. Use two #10-32 fasteners to secure the dispenser in place.
4. Replace the cover.

Figure 2–28. Rinse Aid Dispenser

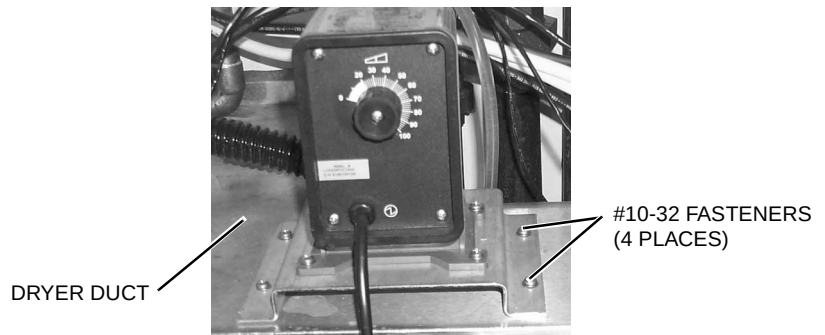

5. Position the rinse aid pump on the top of the bottom dryer duct (between the junction box and the top dryer duct) and align with the holes in the duct.
6. Secure the pump mount to the top of the dryer duct with four #10-32 fasteners (phillips head screws and lock washers).

Installation

Unload End Indicator Panel Box

Objective

Mount the indicator panel box on the unload end of the washer.

Installation

Refer to Figure 2–29. Unload End Indicator Panel Box.

Figure 2–29. Unload End Indicator Panel Box



1. Remove the face plate of the box.
2. Align the mounting holes in the back of the box with the two #10-32 threaded holes at the edge of the unload end barrier panel.
3. Use #10-32 fasteners to secure the box to the panel.
4. Install the face plate.

The box overhangs the panel to permit the routing of its electrical cable.

Door Proximity Switches

Objective

Install a proximity switch assembly on both the load and the unload end door panels.

Installation

Refer to Figure 2–30. Door Proximity Switches.

Figure 2–30. Door Proximity Switches



1. Orient the two ends of the switch assembly as shown in Figure 2–30 and align with the threaded mounting holes in the panel.
2. Use three #10-32 fasteners (phillips head screw and lock washer) to secure the top of the assembly to the middle panel above and between the doors.
3. Use four #10-32 fasteners (phillips head screw and lock washer) to secure the bottom of the assembly to the middle panel between the door latches.
4. Route the assembly's cables to the junction box on the service side of the washer:
The load end cables, P3 and P5, connect to the junction box at J3 and J5, respectively. The unload end cables, P4 and P6, connect to the junction box at J4 and J6, respectively.
5. Repeat steps 1 through 4 for the other door assembly.

Installation

Sump Drain Valve


Objective

Install the motorized sump drain valve assembly.

Installation

Refer to Figure 2–31. Sump Drain Valve.

Figure 2–31. Sump Drain Valve

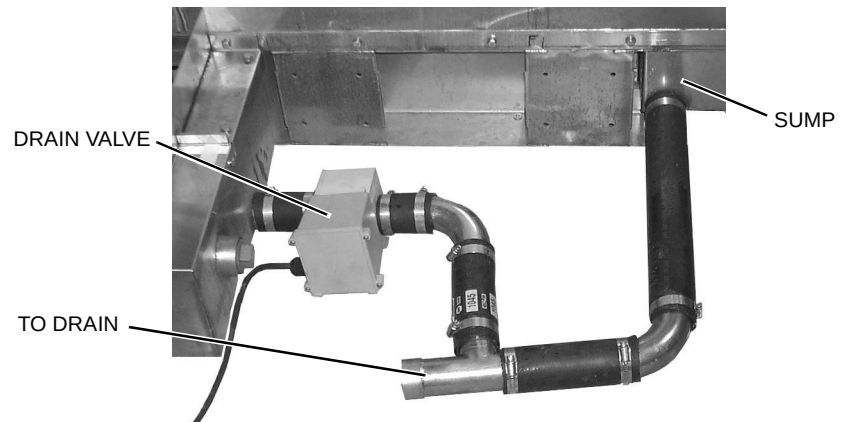

1. As shown in Figure 2–31, use a hose clamp to attach one flexible hose on the drain valve assembly to the 2" outlet on the sump.
2. Use a hose clamp to attach the hose from the drain valve to the intake on the return pump box.
3. Route the last hose to drain.

Return Pump


Objective

Attach the return pump to the sump framework.

Installation


Refer to Figure 2–32. Return Pump.

Figure 2–32. Return Pump

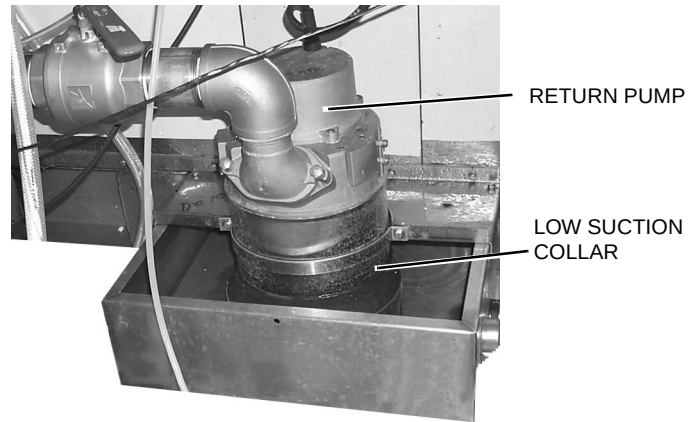

1. Slide the low suction collar over the bottom of the return pump and position the pump in the sump.
2. Secure the pump to the flange on the front sump cover by attaching the two ends of the metal strap with 5/16"-18 fasteners (2" hex head cap screws and lock washers) to the flange.

Figure 2–33. Return Pump

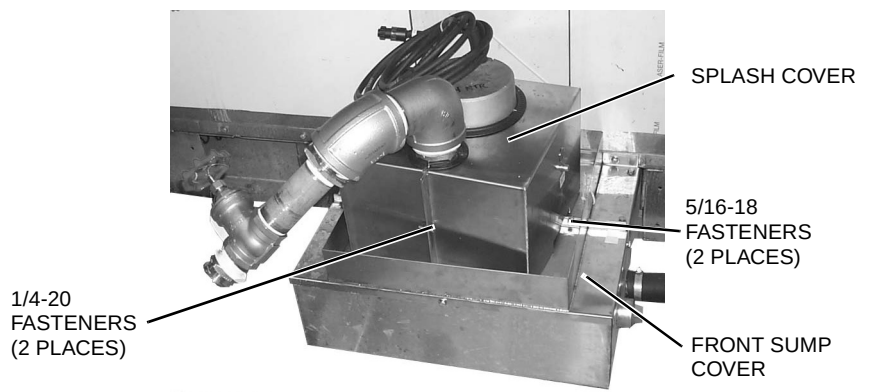

3. Place the two halves of the splash cover around the pump and secure with two 1/4-20 fasteners (1" hex head cap screws and nuts).

Circulation Tank Assembly


Objective

Assemble, position, and level the circulation tank.

Installation

Refer to Figure 2–34. Circulation Tank.

Figure 2–34. Circulation Tank

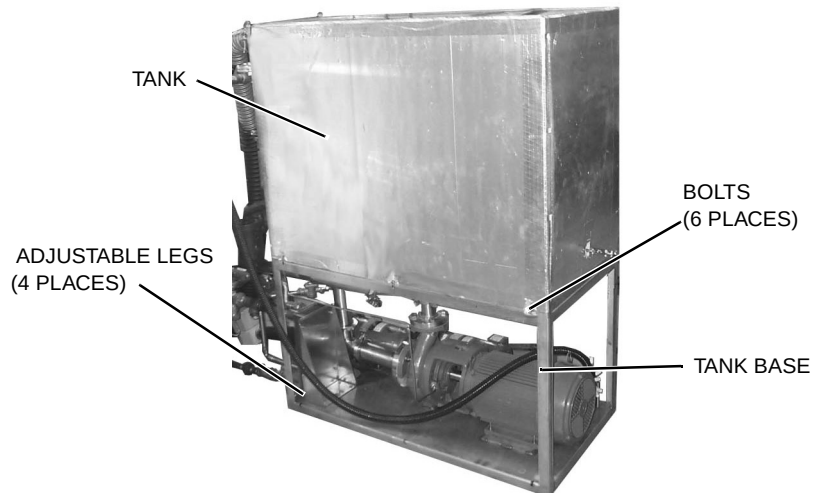

1. Refer to the rough-in drawing and position the tank base at the correct location.
2. Use the adjustable legs to level the tank.
3. Place the tank on the base so that the drain flange fits through the hole in the base and the small holes fit over the anchoring bolts in the base.
4. Secure the tank to the base with six fasteners (nuts, flat washers, and lock washers).

Wash Pump


Objective

Install the wash pump in the bottom shelf of the tank.

Installation

Refer to Figure 2–35. Wash Pump.

Figure 2–35. Wash Pump

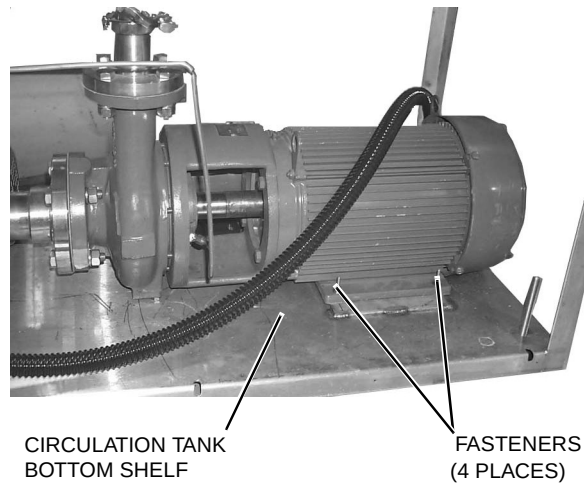

1. Place the pump on the bottom rack of the circulation tank assembly and align the holes in the pump with the bolts in the mounting plate.
2. Secure the pump to the tank with four fasteners (lock washers, flat washers, and nuts).


Tank Drain Valve, Tank Overflow, and Tank Water Level Indicator

Objective

Install the motorized tank drain valve assembly, the tank overflow drain, and the tank water level indicator.


Installation

Figure 2–36. Tank Drain Valve

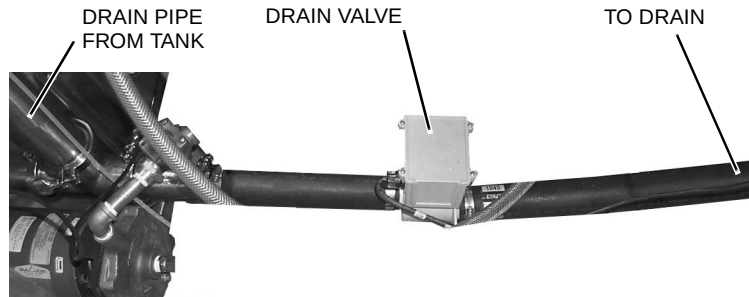

1. As shown in Figure 2–36, use a hose clamp to attach one flexible hose to the drain valve assembly and to the 2" outlet on the wash pump.
2. Use a hose clamp to attach the hose from the drain valve to drain.
3. As shown in Figure 2–36, secure the flexible drain hose to the tank with a hose clamp. Use additional hose to route the overflow to drain.

Figure 2–37. Tank Overflow Drain and Water Level Indicator

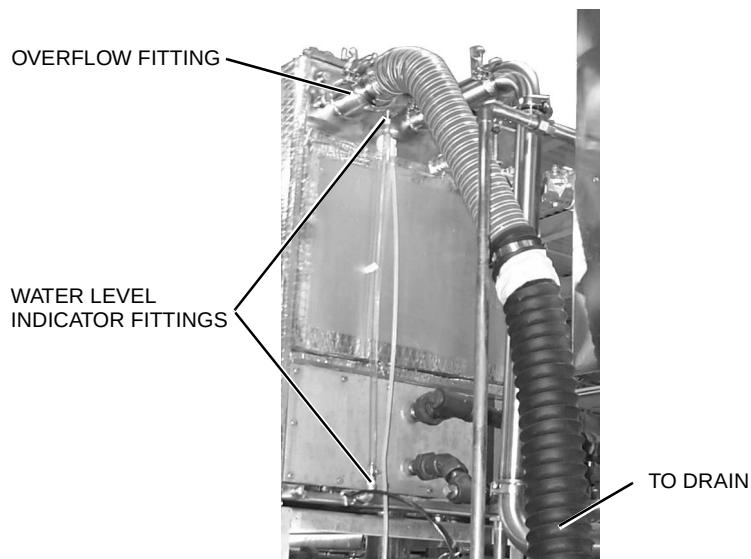

4. Secure the transparent indicator hose to the top and bottom fittings with hose clamps.

Booster Heater Assembly


Objective

Install the booster heater assembly.

Installation

Refer to Figure 2–38. Booster Heater Assembly.

Figure 2–38. Booster Heater Assembly

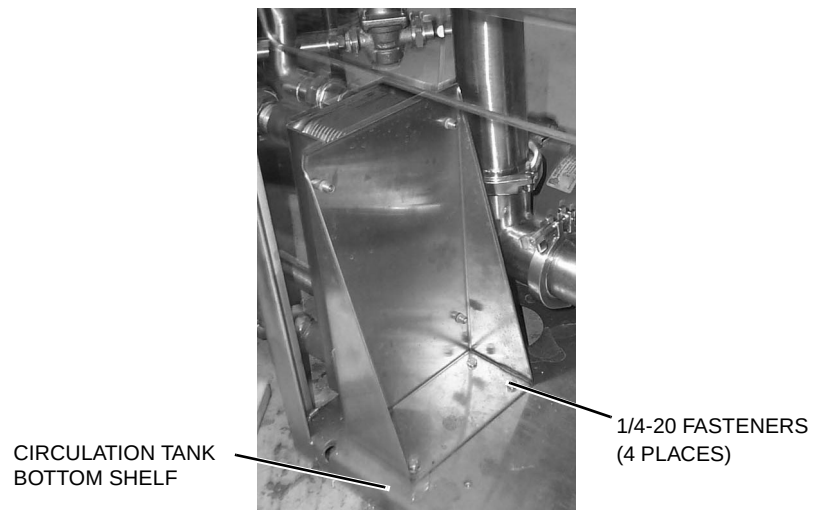

1. Position the booster heater assembly in the bottom shelf of the circulation tank and align with the holes in the shelf.
2. Secure the assembly to the tank with 1/4-20 fasteners (four each 3/4" hex head cap screws, flat washers, and lock washers).

Installation

Rinse Pump


Objective

Install the rinse pump on the bottom rack of the circulation tank.

Installation

Refer to Figure 2–39. Rinse Pump.

Figure 2–39. Rinse Pump

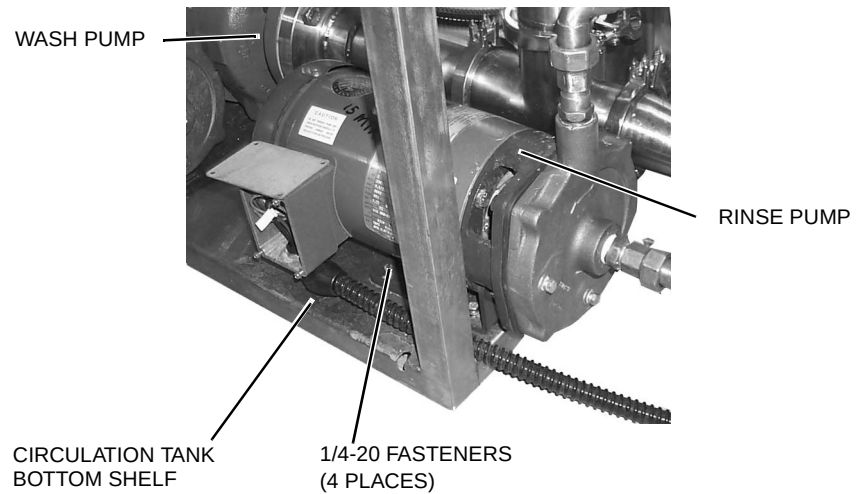

1. Position the pump on the bottom shelf of the circulation tank and align with the holes in the bottom of the shelf.
2. Secure the pump to the tank with fasteners (four each hex head cap screws, lock washers, and flat washers).

Plumbing

The washer plumbing is designed with a large number of quick-disconnect joints that enable service personnel to isolate problems and to replace components easily. When a washer is disassembled at the factory for shipment to a customer, plumbing sections are removed for efficient packing and quick assembly at the installation site. All plumbing sections are tagged at both ends to indicate what the section is connected to. The following information provides only general descriptions of the completed plumbing. For details of the plumbing for your site, refer to the drawings provided with your washer and to the information tagged to each plumbing section.

Stainless Steel Plumbing


Objective

Install the washer's stainless steel tubing.

Installation

Refer to Figure 2–40. Typical Stainless Steel Plumbing Connector.

Figure 2–40. Typical Stainless Steel Plumbing Connector

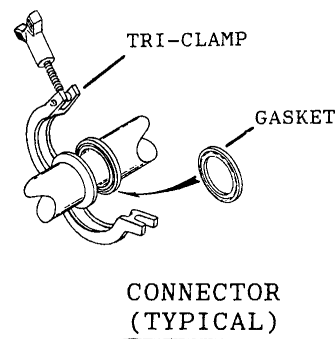

The stainless steel plumbing for the washer consists of the following sections:

- Return pump to the intake of the circulation tank.
- The circulation tank drain to the wash pump and to the tank drain valve.
- The wash pump to two 2-1/2" sanitary fittings on the front wall, and over the top of the washer to a 2-1/2" sanitary fitting on the rear of the load end top panel.
- The inside front wall to the two front wash manifold hoses.
- The inside rear wall to the rear wash manifold hoses.
- The copper fitting near the output of the booster heater two 1-1/4" sanitary fittings on the front wall, and over the top of the washer to a 1-1/4" sanitary fitting on the rear of the load end top panel.
- The inside front wall to the two front rinse manifold hoses.
- The inside rear wall to the two rinse manifold hoses.

Installation

Black Iron (Steam) Plumbing

Objective

Install the steam supply line and the condensate return line.

Installation

The black iron steam plumbing for the washer consists of the following sections:

- The utility connection to the booster heater, to the circulation tank, and over the top of the washer to the two dryer heaters.
- Condensate from the dryer heaters to the booster heater and the circulation tank.

Hot Water (Copper) Plumbing

Objective

Install the hot water supply line.

Installation

The copper plumbing for hot water consists of the following sections:

- The utility connection to the intake for the circulation tank and to the intake of the rinse pump.
- The rinse pump to the booster heater.
- The booster heater to a stainless steel fitting on the front side of the washer.

Cold Water (Copper) Plumbing

Objective


Install the cold water supply line.

Installation

The copper plumbing for cold water consists of the following sections:

- The utility connection up over the top of the washer to the two condensers on the unload end top panel.
- The condensers to a connect flexible drain hose, which then connects to the fitting at the fill pipe of the tank, as shown in Figure 2–41. Secure the flexible drain hose with hose clamps.

Figure 2–41. Dryer Heater Condensate Feed to Tank

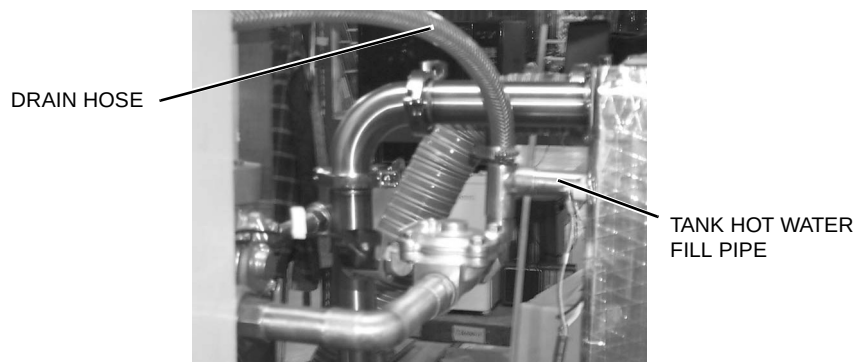

Electrical Wiring

Objective

Make all required electrical wire connections between the electrical components and the control box and junction boxes.

Installation

1. Route all component electrical cables, including thermocouple cables, from the control box or junction box to the appropriate electrical component.


Refer to Table 2–2 and Table 2–3 for the routings.

2. Connect the cables to the corresponding electrical component.

Most cables have keyed connectors that plug in and are secured with threaded fittings. Cables that must be wired to the component are noted in Table 2–2 and Table 2–3.

Attach all solenoid coil housings to their related solenoid valve bodies, as shown in Figure 2–42.

Figure 2–42. Solenoid Valve Assembly

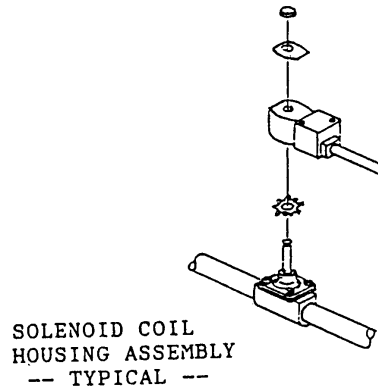

The actual configuration for your washer may vary from that listed here.

Table 2–2. Junction Box Cable Connections

Jack	Cable P/N	Cable Label	Destination
J2	61301603973	P1 – P2	Control Box Jack J1
J3	Y960788	P3 – 1PS	Load End Proximity Switch 1PS
J4	Y960788	P4 – 2PS	Unload End Proximity Switch 2PS
J5	Y960788	P5 – 3PS	Load End Proximity Switch 3PS
J6	Y960788	P6 – 4PS	Unload End Proximity Switch 4PS
J7	61301603975	P7 – 1LS	Retract Limit Switch 1LS
J8	61301603975	P8 – 2LS	Extend Limit Switch 2LS
J9	61301603976	P9 – 2MV	Tank Drain Valve 2MV
J10	61301603988	P10 – 7MTR	Exhaust Elbow Damper 7MTR
J11	61301603978	P11 – 6MTR	Front Condenser Damper 6MTR
J12	61301603978	P12 – 8MTR	Rear Condenser Damper 8MTR
J13	Y960456	P13 – 3SOL	Tank Hot Water Solenoid Valve 3SOL
J14	Y960456	P14 – 4SOL	Tank Steam Solenoid Valve 4SOL
J15	Y960456	P15 – 5SOL	Booster Heater Steam Solenoid Valve 5SOL
J16	Y960456	P16 – 1SOL	Front Dryer Steam Solenoid Valve 1SOL
J17	Y960456	P17 – 8SOL	Rear Dryer Steam Solenoid Valve 8SOL
J18	Y960456	P18 – 2SOL	Front Condenser Cold Water Solenoid Valve 2SOL
J19	Y960456	P19 – 9SOL	Rear Condenser Cold Water Solenoid Valve 9SOL
J20	Not used.		
J21	Not used.		
J22	61301603980	P22 – P22A	Unload End Indicator Box
J23	61301603981	P23 – 9MTR	Detergent Pump 9MTR
J24	(part of rinse aid dispenser)	P24 – 10MTR	Rinse Aid Pump 10MTR
J25	61301603982	P25 – 1E/2E	Circulation Tank High and Low Water Level and Refresh Probes
J26	61301603983	P26 – 1ACT	Floor Tilt Actuator 1ACT
J27	61301603984	P27 – 1DS	Washer Compartment Light 1DS
J28	Not used.		
J29	Not used.		
J30	Not used.		

Table 2–3. Control Box Cable Connections

Jack	Cable P/N	Cable Label	Destination
J1	61301603973	P1 – P2	Junction Box Jack J2
J31	61301603985	P31 – 1TC	Circulation Tank Thermocouple 1TC
J32	61301603985	P32 – 2TC	Front Dryer Thermocouple 2TC
J33	61301603985	P33 – 3TC	Rear Dryer Thermocouple 3TC
J34	61301603985	P34 – 4TC	Rinse Water Thermocouple 4TC
J35	Not used.		
J36	61301604134	P36 – 1MTR	Wash Pump 1MTR
J37	61301603987	P37 – 2MTR	Front Dryer Blower 2MTR
J38	61301603987	P38 – 3MTR	Rear Dryer Blower 3MTR
J39	61301603988	P39 – 4MTR	Manifold Drive Motor 4MTR
J40	61301603989	P40 – T	Transformer T
J50	61301603976	P50 – 1MV	Sump Drain Valve
J51		P51 – JB2	Dispenser Float Switch Junction Box
J53		P53 – 3S	Emergency Off Switch 3S
J55		P55 – 11SOL	Rinse Hot Water Solenoid Valve 11SOL
J58		P58 – 14 MTR	Return Pump 14 MTR
J59		P59 – 5PS	Manifold Drive Motor Monitor (Proximity Switch)
J60		P60 – 15 MTR	Rinse Pump 15MTR

Install Components on the Inside of the Washer

This section provides instructions for installing equipment on the inside of the washer. The procedures are presented in a recommended order. Refer to the following sections.

- “Rear Dryer Ducts” on page 2-49
- “Drive Chain Tension Idlers and Idler Bearings” on page 2-51
- “Chain Drive Assembly” on page 2-52
- “Spray Manifold Supports and Manifold Assembly” on page 2-54
- “Manifold Cover and Spray Guard, Manifold Guard Tubes, Wash Cart Tubes” on page 2-56
- “Emergency Stop Switch Cables” on page 2-58


Rear Dryer Ducts

Objective

Attach the two rear interior ducts to the rear wall of the washer and to the cutouts in the ceiling. Attach the mounting plate between the dryer ducts.

Installation

Figure 2–43. Interior Dryer Ducts

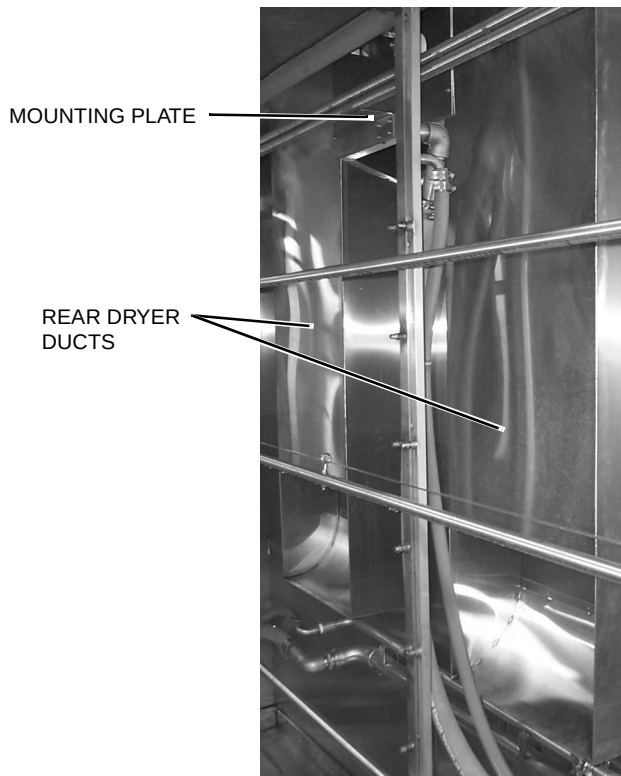

1. Inside the washer, apply silicone sealant to the two 18" x 7-1/2" rectangular cutouts in the top of the washer compartment.

Installation

2. Position one of the dryer ducts on the wall and align the mounting holes with those in the compartment wall and ceiling.
3. Secure the duct to the wall with eight #10-32 fasteners (1/2" phillips head screws, lock washers, and flat washers).
4. Secure the duct to the ceiling cutouts with nine #10-32 fasteners per cutout (1/2" phillips head screws, lock washers, and flat washers).
5. Repeat steps 2 through 4 for the other duct.
6. Install the mounting plate between the two dryer ducts. Secure to the dryer ducts and to the top panel with seven #10-32 fasteners.

Drive Chain Tension Idlers and Idler Bearings

Objective


Install the following components inside the washer compartment:

- Four drive chain tension idlers
- Two idler bearings

Installation

Refer to Figure 2–44. Drive Chain Idler and Idler Bearing.

Figure 2–44. Drive Chain Idler and Idler Bearing

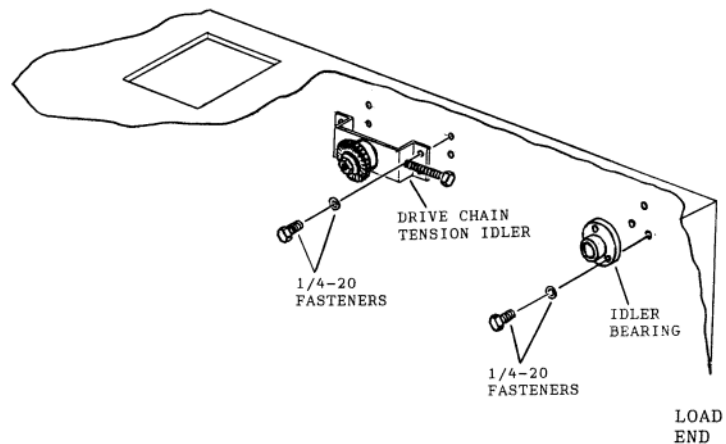

1. Mount the four drive chain tension idlers, one on either side of the compartment and two in the middle. The front drive chain tension idler is attached to the washer panel, the rear idler is attached to the mounting bracket between the two dryer ducts, and the middle idlers are attached to either side of the center mounting bracket.

Secure each with four 1/4-20 fasteners (3/4" hex head cap screw and lock washer).

2. Mount the two idler bearings for the manifold drive shaft at the load end of the rear side panel and of the front side of the center mounting bracket. Secure each with three 1/4-20 fasteners (1" hex head cap screw, lock nut, lock washer, and flat washer).

Chain Drive Assembly


Objective

Install the drive shaft, drive chains, and push rod that comprise the chain drive assembly.

Installation

Refer to Figure 2–45. Chain Drive Assembly.

Figure 2–45. Chain Drive Assembly

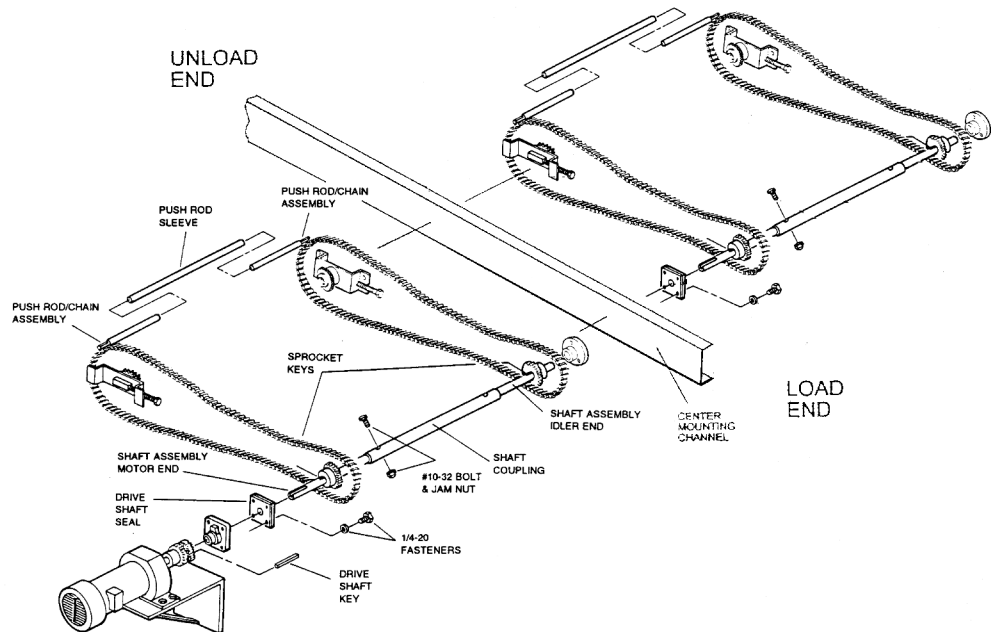

1. Insert the drive shaft key into the keyway in the spray manifold drive motor that you installed previously.
2. Mount the front drive shaft seal to the inside of the upper corner of the load end side panel, opposite the flange bearing that you installed previously.
 - a. Position the seal so its rubber side is against the panel.
 - b. Secure in place with #10-32 fasteners (3/8" pan head screw and lock washer).
3. Insert, but do not fasten, the motor and idler ends of each shaft assembly into the shaft coupling.
4. Hang the two push rod/chain assemblies from the shaft assembly.
5. Fit the idler end into the idler bearing that you installed previously.

6. Extend the motor end through the seal and flange bearing, and then engage the key (installed in step 1) with the shaft's keyway.
7. Rotate the idler end of the shaft until its sprocket key is in alignment with the sprocket key at the shaft's motor end.
8. Secure the shaft ends to the shaft coupling with two #10-32 bolts and jam nuts.
9. Adjust the proximity switch so that the gap between the switch and the sensing collar on the drive shaft is less than or equal to 2 mm.
10. Use #10-32 fasteners (four each 1/4" pan head screws and lock washers) to attach the drive coupling guard to the motor's mounting fixture.

NOTE

You can wait until the operation of the motor has been checked by Product Support personnel before installing the drive coupling guard.

11. Insert the ends of the push rod chain assembly into the push rod sleeve.
12. Fit the chains onto their related sprockets at the drive shaft and at the drive chain tension idlers that you installed previously.
Make sure the ends of the push rod are seated on matching sprocket teeth.
13. Adjust the chain tension so there is no more than 1" of play in either line.
You can loosen a tension idler's 3/8-16 bolt to permit movement of its sprocket. Turning the 1/4-20 adjustment bolt repositions the sprocket, thereby increasing or decreasing chain tension.
14. Repeat steps 2 through 11 for the rear chain drive assembly.

Spray Manifold Supports and Manifold Assembly


Objective

Install the three spray manifold supports, one on either side of the washer compartment and one in the middle, and then install the two spray manifold assemblies.

Installation


Refer to Figure 2-46. Spray Manifold Support.

Figure 2-46. Spray Manifold Support

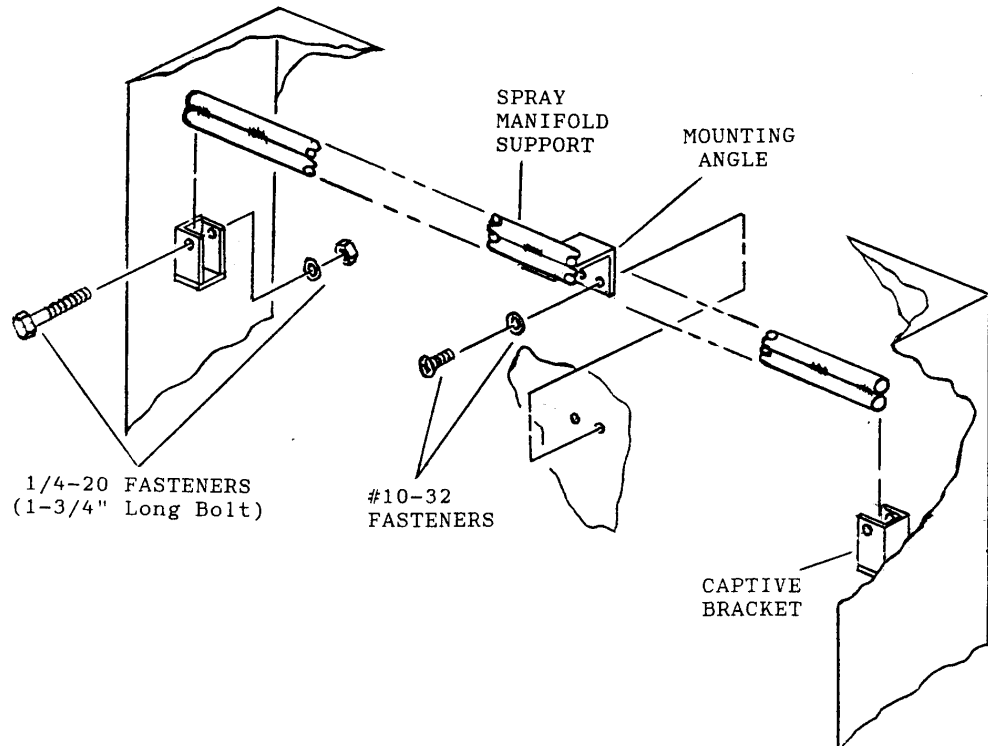

1. Seat the ends of the outside (front and rear) spray manifold supports in the uppermost captive brackets that are welded to the inside of the end panels.
2. Apply silicone sealant to four #10-32 fasteners, then secure the mounting angle of the front support to the front side panel.
3. Use four #10-32 fasteners to secure the mounting angle of the rear support to the mounting plate between the two dryer ducts.
4. Attach 1/4-20 fasteners to the captive brackets to ensure the ends of the spray manifold supports remain in place.

Figure 2-47. Spray Manifold Assembly

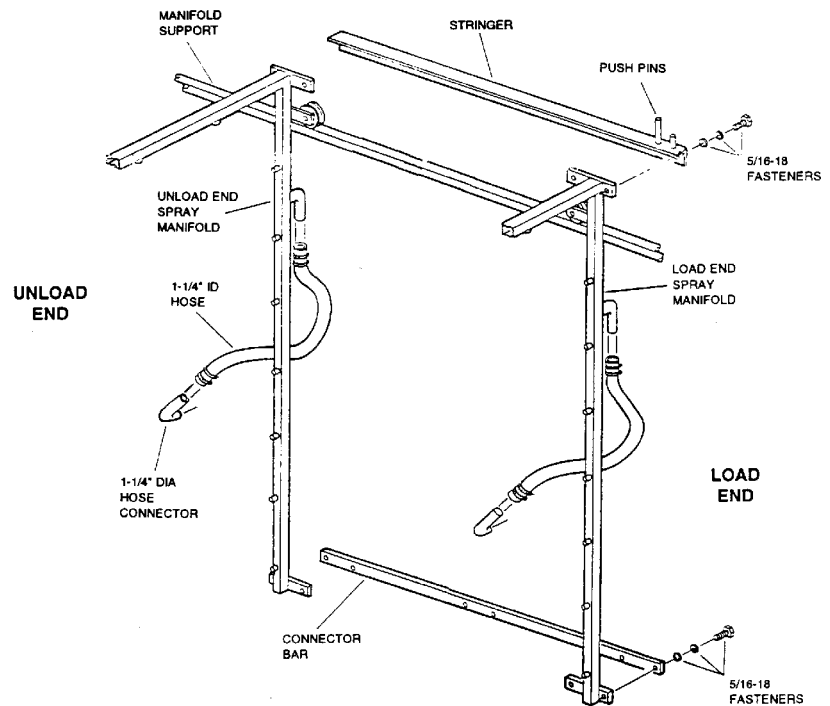

5. Attach two rinse and two wash hose connectors to the inlet ports in the front side panel. Repeat for the rear panel. When tight, all connectors should point toward the unload end of the unit at an angle of approximately 45 degrees.
6. Set the two spray manifolds on the manifold supports.
7. Seat the ends of the middle spray manifold support in the uppermost captive brackets that are welded to the inside of the end panels.
8. Attach 1/4-20 fasteners to the captive brackets to ensure the ends of the spray manifold supports remain in place.
9. Connect the manifolds at the top with two stringers in each compartment. Orient the stringers so that their push pins are directed toward the load end. Use 5/16-18 fasteners to secure the stringers to the manifolds.
10. Use 5/16-18 fasteners to connect the manifolds at the bottom (one on each side and one in the middle) with three connector bars. Use two sets of fasteners at each end of each connector bar.
11. Install the wash and rinse hoses between the manifold and the panel hose connectors. Secure each end of each hose with two hose clamps. Position the hoses so they rest against the panels and not obstruct manifold movement.

Manifold Cover and Spray Guard, Manifold Guard Tubes, Wash Cart Tubes

Objective


Install the following components inside the washer:

- Two manifold covers
- Manifold spray guard
- Four manifold guard tubes
- Three wash cart guide tubes

Installation

Refer to Figure 2–48. Manifold Cover and Spray Guard, Manifold Guard Tubes, Wash Cart Guide Tubes.

Figure 2–48. Manifold Cover and Spray Guard, Manifold Guard Tubes, Wash Cart Guide Tubes

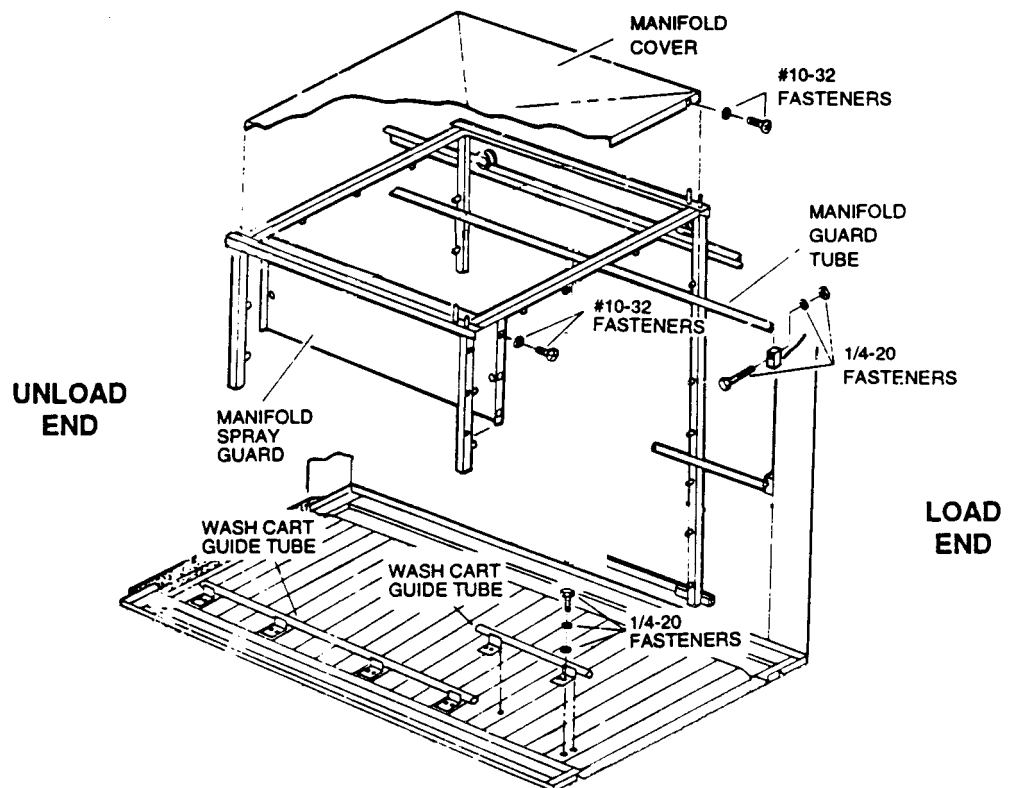

1. Position a manifold cover on top of each side of the spray manifolds. Secure the cover in place at the load and unload ends with eight #10-32 fasteners (two at each end of each cover).
2. On the front side of the washer, position the manifold spray guard against the inside of the spray manifolds so that the cutouts fit over the manifold nozzles. Secure the guard in place at the load and unload ends with six #10-32 fasteners.

3. Attach the ten manifold guard tubes to the brackets welded to the load and unload end door panels. For each wash compartment, attach three tubes to the outer side and two tubes on the side at the middle of the washer.
 - a. Place a 1/4-20 bolt through the manifold guard tube brackets on each end of the washer at the appropriate level and secure with a locknut.
 - b. Insert each end of the manifold guard tube so that it rests on the bolt inside the bracket.

NOTE

There are two manifold guard tubes that each have three eyebolts to accommodate the emergency stop cables. These tubes should be installed as the middle of the three tubes that are installed on the outer sides of the washer. These tubes are also secured to the bracket through holes in the tube, rather than by resting on the bolt.

4. Install the six wash cart guide tubes, three on each outer side of the washer.
 - a. Position three wash cart guide tubes on the outside edge of the front wash compartment.
 - b. Butt the edges of the tube's mounting brackets against the floor frame over the sump.
 - c. Using the brackets as templates, drill and tap four 1/4-20 holes into the grate. Make sure the holes are located against the inside of the bracket slots so the tube can be adjusted back toward the center line of the floor.
 - d. Repeat steps a through c for three remaining wash cart guide tubes on the outside edge of the rear wash compartment.
 - e. Secure all six tubes to the floor with 1/4-20 fasteners.

Emergency Stop Switch Cables

Objective

Install the emergency stop cables. One cable runs along each side of the washer. The front cable passes through the side panel and connects to the emergency stop switch on the service side of the washer. The rear cable passes through the top panel and connects to the switch mounted on top of the washer.

Installation


1. Install the emergency stop cable on the front side of the washer and connect to the switch on the outside of the washer.
 - a. Refer to Figure 2–49. At the unload end of the washer, attach one end of the cable to the guide rail bracket. Loop the cable through the next hole in the bracket above the guide rail and secure with a cable fastener.

Figure 2–49. Emergency Cable Connection



- b. As shown in Figure 2–50, feed the cable through the three eyebolts on the guide rail to the load end, around the two weldments on the front side panel, and through the opening in the front side panel.

Figure 2–50. Front Emergency Stop Cable

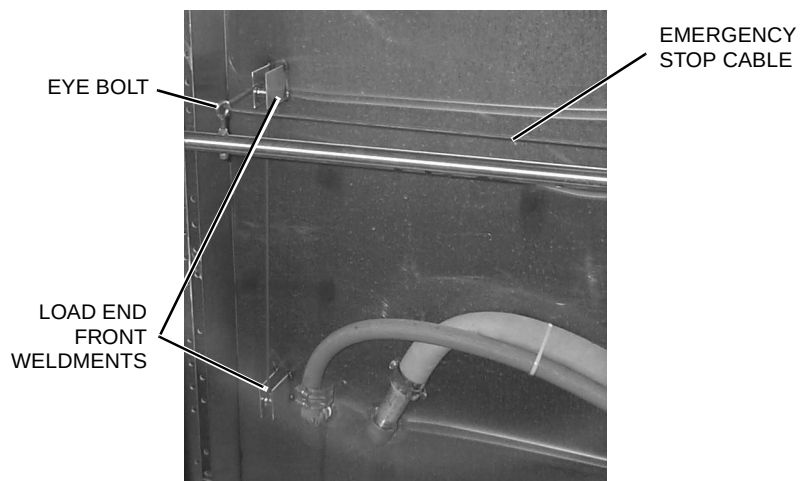

- c. Secure the end of the cable to the emergency stop switch assembly with a cable fastener as shown in Figure 2–26.
2. Install the emergency stop cable on the rear side of the washer and connect to the switch on the top of the washer.
 - a. Refer to Figure 2–49. At the unload end of the washer, attach one end of the cable to the guide rail bracket. Loop the cable through the next hole in the bracket above the guide rail and secure with a cable fastener.
 - b. As shown in Figure 2–51, feed the cable through the three eyebolts on the guide rail to the load end, around the weldment on the end panel, and up through the opening in the rear side top panel.

Figure 2–51. Rear Emergency Stop Cable



- c. Secure the end of the cable to the emergency stop switch assembly with a cable fastener as shown in Figure 2–14.

Final Installation Tasks

This section provides instructions for completing the installation of the washer. Refer to the following sections.

- “Final Door Assembly” on page 2-61
- “Dispenser Tubing” on page 2-62
- “Sanitary Barrier Flanges” on page 2-64
- “Pit Covers (Option)” on page 2-65
- “Service Area Enclosure (Option)” on page 2-66
- “Base Shrouds (Floor Mounted Option)” on page 2-67
- “Ramps (Floor Mounted Option)” on page 2-68
- “Exhaust Connection” on page 2-68
- “Plumbing System Connections” on page 2-68
- “Electrical Supply Connection” on page 2-69
- “Concluding Tasks” on page 2-69

Final Door Assembly

Objective

Hang the load and unload doors back on their hinges.

Installation

Refer to Figure 2–52. Door Assembly.

Figure 2–52. Door Assembly



A washer door is heavy and awkward to handle. Take care to avoid crushing or strain injuries.

1. Mount the door on the washer.
 - a. Raise and maneuver the door until its hinge posts are in vertical alignment over the three hinge mounts attached to the door panel.
 - b. When aligned, lower the door and properly seat all three posts in their respective mounts.

Repeat steps 1 through 3 for the other door assemblies.

Dispenser Tubing


Objective

Connect the detergent and rinse aid dispenser pump tubing.

Installation


1. Connect the detergent tubing.
 - a. Place the detergent float switch assembly (see Figure 2–53) in the detergent supply container.

Figure 2–53. Detergent/Rinse Aid Float Switch

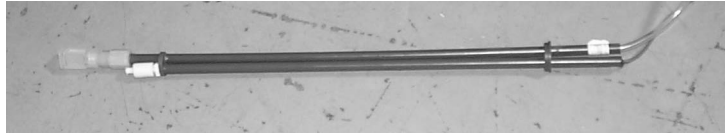

- b. Connect the supply tubing from the detergent float switch to the left side of the detergent pump (Figure 2–54).


Figure 2–54. Detergent Pump

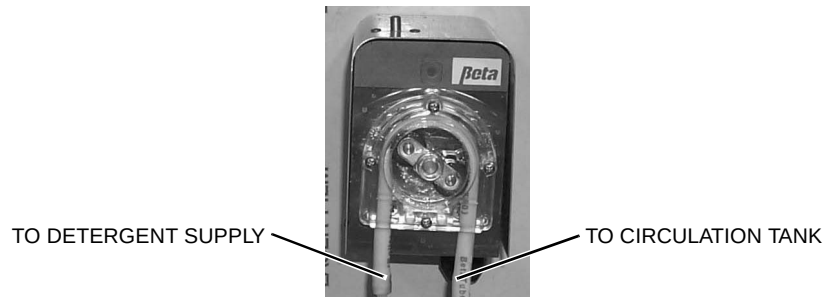

- c. Connect the DETERGENT connector from the float switch to the DETERGENT connector from the cable connected to the float switch junction box.
 - d. Connect the discharge tubing to the right side of the detergent pump.
 - e. Connect the plastic compression fitting on the other end of the tubing to the fitting on the tank.

2. Connect the rinse aid tubing.
 - a. Place the rinse aid float switch assembly in the rinse aid supply container.
 - b. Connect the supply tubing from the float switch assembly to the bottom plastic compression fitting on the rinse aid pump (Figure 2–55).

Figure 2–55. Rinse Aid Pump

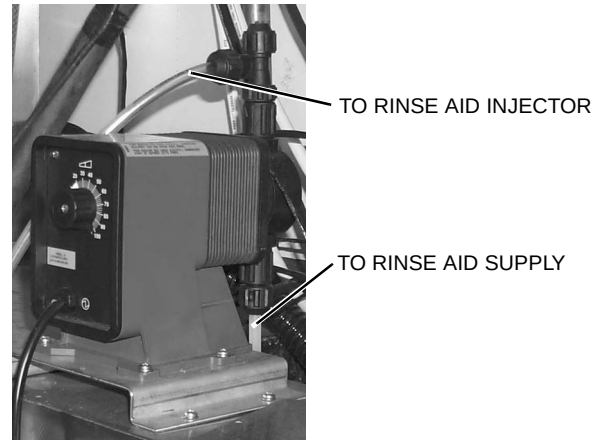

- c. Connect the RINSE AID connector from the float switch to the RINSE AID connector from the cable connected to the float switch junction box.
- d. Connect the discharge tubing to the top fitting on the rinse aid pump using plastic compression fitting.
- e. Slide the other end of the tubing over the copper injector fitting near the output of the booster heater.

Sanitary Barrier Flanges

Objective

Attach the sanitary barrier flanges to the load and unload ends of the washer.

The following instructions apply to units with structural walls situated at both the load and unload ends. Units with only one wall (generally at the unload end) receive a service area enclosure and an unload end top barrier flange. For the latter configuration, refer to “Service Area Enclosure (Option)” on page 2-66.



The method and materials for securing the sanitary barrier flanges to a structural wall are to be provided by the customer.

Installation

1. Using #10-32 fasteners, attach the two short attachment angles to the load end side panel and the single long attachment angle to the unload end side panel. Position the proximity switch and unload end indicator panel cables so they route through the cutouts provided in the angles.
2. Secure the load and unload end side barrier flanges to the attachment angles with #10-32 fasteners.
The interior edge of a flange seats between an angle and the side panel.
3. Attach the top barrier flanges.
 - a. Remove and retain the acorn nut fasteners from the two top thru bolts.
 - b. Attach the load and unload end top barrier flanges.
 - c. Use the acorn nuts along with #10-32 fasteners to secure the flanges to the top panels and to the side barrier flanges.
4. Attach the intake frame assembly to the unload end top barrier flange.

Pit Covers (Option)

Objective

Install the pit covers, if that option has been provided, at the load and unload Ends of a pit mounted washer.

An additional pit cover may be provided for installation along the non-service side of the washer if that side is exposed.

1. Place the pit covers in position against the washer.
2. Using the mounting holes in the cover flanges as a template, drill and tap #10-32 holes into the washer base.
3. Secure the pit covers to the washer base with #10-32 fasteners.

Service Area Enclosure (Option)

Objective

Assemble the service area enclosure.

The service area enclosure is usually installed on units that do not have a structural wall at either the load or unload end.

Installation

1. Attach the two short attachment angles to the load end side panel and the single long attachment angle to the unload end side panel with #10-32 fasteners. Position the proximity switch and unload end indicator panel cables so they route through the cutouts provided in the angles.
2. Use four 1/4-20 fasteners to attach the mounting base frame to the base frame of the washer.
3. Secure the load and unload end side panels to the attachment angles. The interior edge of a panel seats between an angle and the washer's side panel. Use #10-32 fasteners to secure the base of the each panel to the mounting base frame.
4. Position the access panel divider in the middle of the mounting base frame. The upper end of the divider has two #10-32 threaded holes and the lower end has two 1/4" diameter holes. Secure the bottom of the divider to the frame with two #10-32 fasteners.



Longer units may have two dividers.

5. Secure the top panel to the load and unload end side panels. Use #10-32 fasteners to secure it to the top of the access panel divider.
6. Install the service access panels.
 - a. Fit the holes in the bottom of a panel to the panel mounting studs on the mounting base frame.
 - b. Turn the latches 90 degrees to secure the service access panel in place.
7. Attach the load and unload end top barrier flanges.


Base Shrouds (Floor Mounted Option)**Objective**

Install the base shrouds at the load and unload ends of a floor mounted washer.

Installation

Refer to Figure 2-56. Base Shroud.

Figure 2-56. Base Shroud

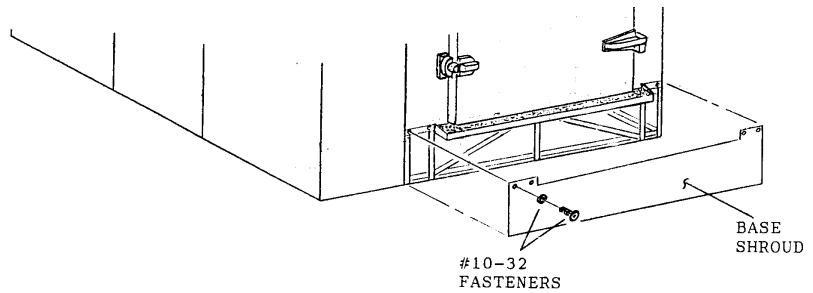

1. Align the holes in the base shroud with #10-32 threaded holes in the base frame.
2. Secure in place with #10-32 fasteners.

Repeat steps 1 and 2 for the other base shrouds.

Installation

Ramps (Floor Mounted Option)


Objective

Install the ramps at the load and unload ends of a floor mounted washer.

Installation

Refer to Figure 2–57. Ramp.

Figure 2–57. Ramp

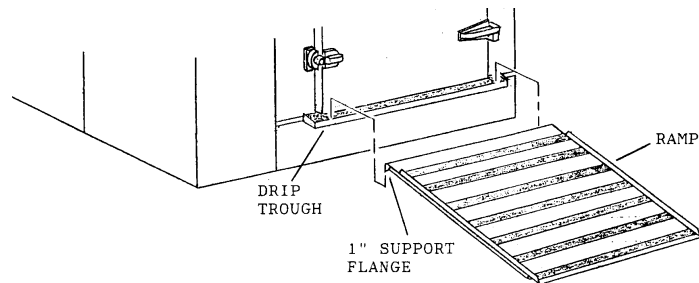

Insert the 1" support flange of the ramp behind the front edge of the drip trough that extends from the door threshold. No fasteners are required.

Exhaust Connection

This procedure applies only to vented washers.

Install a dedicated, corrosion-proof, watertight duct (800 CFM, negative 1/4" static pressure) from the 12-inch diameter exhaust elbow (Figure 2–18 on page 2–25) to the building's exhaust system. The duct assembly should be sloped toward the washer.

Plumbing System Connections

All service connections must conform to local codes. The supply line connections are labeled for identification. Refer to "Utilities and Specifications" on page 1-3 for pipe sizes, pressures, and requirements at site of installation.

1. Connect the 1-inch hot water supply line to the 1-inch service connection.
2. Connect the 3/4-inch cold water supply line to the 3/4-inch service connection.
3. Connect the 1-1/2 inch steam supply line to the 1-1/2 inch service connection.
4. Connect the 3/4-inch steam return or drain line to the 3/4-inch condensate line connection.
5. Connect a 3-inch drain line to the 3-inch drain fitting.

Electrical Supply Connection



A fused disconnect (supplied by customer) must be installed in the electrical supply line. It should be situated close to the unit for easy access by service personnel.

1. Route the electrical supply line through the top of the control box to the power distribution block.
2. Connect the electrical supply line. Refer to “Utilities and Specifications” on page 1-3.

Concluding Tasks

1. Apply silicone sealant to all permanent exterior seams.
2. Remove the protective film from all exterior surfaces of the washer.
3. Clean and polish the exterior surfaces of the washer.
4. Remove the masonite protective flooring from inside the washer.



At this point, installation is complete. You should contact Getinge/Castle personnel so that mechanical adjustments and electrical performance tests can be accomplished before you operate the equipment. Failure to have the specified Product Support personnel inspect and test this equipment before operation voids the warranty.

A

Actuator Assembly 2–17

B

Barrier Flanges 2–64

Base/Sump 2–1

Black Iron (Steam) Plumbing 2–44

Booster Heater Assembly 2–41

C

Cables, Emergency Stop Switch 2–58

Center Mounting Plate 2–9

Chain Drive Assembly 2–52

Channel Fillers 2–4

Circulation Tank Assembly 2–38

Cold Water (Copper) Plumbing 2–45

Cold Water Specifications 1–3

Condensate Specifications 1–3

Condenser and Dryer Drain Tubing 2–16

Condenser Assemblies 2–13

Control Box 2–29

Control Box Cable Connections 2–48

Copper (Cold Water) Plumbing 2–45

Copper (Hot Water) Plumbing 2–44

D

Detergent and Rinse Aid Dispensers 2–33

Dispenser Float Switch Junction Box 2–31

Dispenser Tubing 2–62

Door Assembly 2–10, 2–61

Door Latch Retainers 2–11

Door Proximity Switches 2–35

Drain Specifications 1–3

Drain Valve, Sump 2–36

Drain Valve, Tank 2–40

Drive Chain Tension Idlers 2–51

Drive Motor Proximity Switch 2–53

Drive Motor Proximity Switch Collar 2–24

Dryer and Condenser Drain Tubing 2–16

Dryer Assemblies 2–13

Dryer Ducts, Front 2–27

Dryer Ducts, Rear 2–49

E

Electrical Specifications 1–3

Electrical Wiring 2–46

Emergency Stop Switch Cables 2–58

Emergency Stop Switch Junction Box 2–19

Emergency Stop Switch, Front 2–32

Emergency Stop Switch, Rear 2–20

Exhaust Elbow 2–25

Exhaust Specifications 1–3

F

Final Door Assembly 2–61

Float Switch Junction Box 2–31

Floor Grates 2–4

Floor Mount Option 1–4

Floor Tilt Pulley System 2–17

Front Dryer Ducts 2–27

Front Emergency Stop Switch 2–32

G

General Description 1–1

Guard Tubes 2–56

H

Hinge Mounts 2–11

Hot Water (Copper) Plumbing 2–44

Hot Water Specifications 1–3

Index

I

- Idler Bearings 2–51
- Installation Advisory 1–4
- Installation Procedures
 - Assemble the Washer Structure 2–1
 - Base/Sump Assembly 2–1
 - Black Iron (Steam) Plumbing 2–44
 - Booster Heater Assembly 2–41
 - Chain Drive Assembly 2–52
 - Circulation Tank Assembly 2–38
 - Cold Water (Copper) Plumbing 2–45
 - Components on Inside of Washer 2–49
 - Components on Outside of Washer 2–22
 - Components on Top of Washer 2–13
 - Control Box 2–29
 - Detergent and Rinse Aid Dispensers 2–33
 - Dispenser Float Switch Junction Box 2–31
 - Dispenser Tubing 2–62
 - Door Assembly 2–10
 - Door Proximity Switches 2–35
 - Drive Chain Tension Idlers and Idler Bearings 2–51
 - Dryer and Condenser Assemblies 2–13
 - Electrical Wiring 2–46
 - Emergency Stop Switch Cables 2–58
 - Emergency Stop Switch Junction Box 2–19
 - Exhaust Elbow 2–25
 - Final Door Assembly 2–61
 - Final Installation Tasks 2–60
 - Front Dryer Ducts 2–27
 - Front Emergency Stop Switch 2–32
 - Hot Water (Copper) Plumbing 2–44
 - Junction Box 2–30
 - Light Assembly 2–26
 - Manifold Cover and Spray Guard, Manifold Guard Tubes, Wash Cart Tubes 2–56
 - Pit Covers 2–65
 - Plumbing 2–43
 - Plumbing Mounting Brackets 2–21
 - Power Floor Tilt Pulley System 2–17
 - Rear Dryer Ducts 2–49
 - Rear Emergency Stop Switch 2–20
 - Return Pump 2–37
 - Rinse Pump 2–42
 - Sanitary Barrier Flanges 2–64
 - Spray Manifold Drive Motor 2–23
 - Spray Manifold Supports and Manifold Assembly 2–54
 - Stainless Steel Plumbing 2–43
 - Sump Drain Valve 2–36
 - Tank Drain Valve 2–40
 - Tank Overflow 2–40
 - Tank Water Level Indicator 2–40
 - Trim Panels 2–12
 - Unload End Indicator Panel Box 2–34
 - Wash Pump 2–39
 - Washer Panels 2–5

J

- Junction Box 2–30
- Junction Box Cable Connections 2–47

L

- Light Assembly 2–26
- Low Suction Collar 2–37

M

- Manifold Assembly 2–54
- Manifold Cover 2–56
- Manifold Drive Motor 2–23
- Manifold Guard Tubes 2–56
- Manifold Spray Guard 2–56
- Manifold Supports 2–54
- Materials and Tools Required 1–6
- Model Identification 1–2
- Mounting Brackets, Plumbing 2–21

O

- Options 1–4

P

- Panels 2–5
- Pit Covers 2–65
- Pit Mount Option 1–4
- Plumbing 2–43
 - Black Iron (Steam) 2–44
 - Cold Water 2–45
 - Hot Water 2–44
 - Stainless Steel 2–43
- Plumbing Mounting Brackets 2–21
- Power Floor Tilt Pulley System 2–17
- Printer Option 1–4
- Proximity Switch Collar, Drive Motor 2–24
- Proximity Switch, Drive Motor 2–53
- Proximity Switches, Door 2–35
- Pulley Mounts 2–17
- Pump, Return 2–37
- Pump, Rinse 2–42

Pump, Wash 2–39

Push Rod/Chain Assemblies 2–52

R

Rating Plate 1–2

Rear Dryer Ducts 2–49

Rear Emergency Stop Switch 2–20

Return Pump 2–37

Rinse Aid and Detergent Dispensers 2–33

Rinse Pump 2–42

S

Sanitary Barrier Flanges 2–64

Seismic Anchoring 2–3

Service Enclosure Option 1–4

Shipping Configuration 1–5

Size Specification 1–3

Spray Guard 2–56

Spray Manifold Assembly 2–54

Spray Manifold Drive Motor 2–23

Spray Manifold Supports 2–54

Stainless Steel Plumbing 2–43

Steam Booster Heater Assembly 2–41

Steam Plumbing 2–44

Steam Specifications 1–3

Sump 2–1

Sump Drain Valve 2–36

T

Tank Assembly 2–38

Tank Drain Valve 2–40

Tank Overflow 2–40

Tank Water Level Indicator 2–40

Tension Idlers 2–51

Threshold Assemblies 2–4

Tools and Materials Required 1–6

Track/Frame Assemblies 2–4

Trim Panels 2–12

Tubing, Condenser and Dryer Drain 2–16

Tubing, Dispenser 2–62

U

Unload End Indicator Panel Box 2–34

Utilities and Specifications 1–3

W

Wash Cart Tubes 2–56

Wash Pump 2–39

Washer Options 1–4

Washer Panels 2–5

Weight Specification 1–3

Wiring, Electrical 2–46

